

DENON


Hi-Fi AM-FM Stereo Receiver

For EUROPEAN, U.K.
AND OTHER Models


SERVICE MANUAL

MODEL DRA-625R/425R

AM-FM STEREO RECEIVER

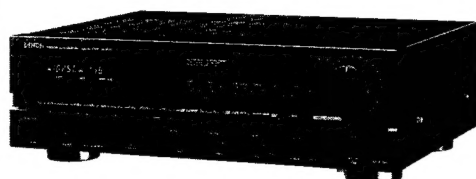

DRA-625R

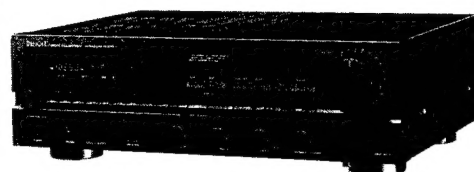

DRA-425R

TABLE OF CONTENTS

OPERATING INSTRUCTIONS	2 ~ 11
REMOVAL OF EACH SECTION	12, 13
METHOD OF ADJUSTMENTS	14, 15
CONNECTION DIAGRAM OF MEASURING INSTRUMENTS	15
SEMICONDUCTORS	16~19
PRINTED WIRING BOARD PATTERNS AND PARTS LIST	
1U-1596S MAIN UNIT P.W.BOARD (DRA-625R)	20
1U-1606S MAIN UNIT P.W.BOARD (DRA-425R)	21
1U-1597S (DRA-625R), 1U-1597S (DRA-425R) DISPLAY UNIT P.W.BOARD	22
1U-1742 CONTROL UNIT P.W.BOARD (DRA-625R/425R)	22
1U-1596S MAIN UNIT PARTS LIST (DRA-625R)	23, 24
1U-1606S MAIN UNIT PARTS LIST (DRA-425R)	24
1U-1597S (DRA-625R), 1U-1597S (DRA-425R) DISPLAY UNIT PARTS LIST	25
1U-1742 CONTROL UNIT PARTS LIST (DRA-625R/425R)	25
EXPLODED VIEW OF CHASSIS AND CABINET & PARTS LIST	
PARTS LIST OF EXPLODED VIEW (DRA-625R/425R Europe Black Version)	26
PARTS LIST OF EXPLODED VIEW (DRA-625R/425R Europe Gold Version)	26
EXPLODED VIEW OF CHASSIS AND CABINET (DRA-625R/425R)	27
WIRING DIAGRAM (DRA-625R/425R)	28
SCHEMATIC DIAGRAM (DRA-625R)	29
SCHEMATIC DIAGRAM (DRA-425R)	30
BLOCK DIAGRAM (DRA-625R/425R)	31

NIPPON COLUMBIA CO., LTD.

PRECAUTIONS FOR INSTALLATION

DRA-625R/425R uses a newly developed heat emitting unit by employing heat pipes. Since the heat pipes contain a coolant, the DRA-625R/425R must be set level or the desired heat emitting effect cannot be achieved. Always install this unit horizontally.

WICHTIGER HINWEIS ZUR AUFSTELLUNG

Der DRA-625R/425R wird durch eine Wärmeabgabereinheit mit Wärmeableitungsrohren gekühlt. Da die Röhre Kühlflüssigkeit enthalten, muß der DRA-625R/425R für ausreichende Kühlung eben stehen. Das Gerät daher immer auf einer waagrechten Fläche aufstellen.

PRECAUTIONS DE MISE EN PLACE

Le DRA-625R/425R emploie une unité thermique nouvellement développée comportant des tuyaux thermiques. Ces tuyaux contenant un liquide réfrigérant toujours placer le DRA-625R/425R en position horizontale, faute de quoi l'effet de radiation thermique ne pourra être obtenu. Toujours placer cet appareil en position horizontale.

PRECAUZIONI PER L'INSTALLAZIONE

Il DRA-625R/425R impiega una unità d'emissione del calore di nuova progettazione impiegante tubi termici. Contenendo i tubi termici un refrigerante, il DRA-625R/425R deve essere sistemato orizzontale, altrimenti non è possibile ottenere l'effetto d'emissione del calore desiderato. Installare sempre questo apparecchio in posizione orizzontale.

PRECAUCIONES PARA LA INSTALACION


El DRA-625R/425R utiliza una unidad emisora de calor nuevamente desarrollada que emplea conductos de calor. Debido a que los conductos de calor contienen refrigerante, el DRA-625R/425R debe ajustarse al nivel o de otra forma el efecto deseado no podrá ser alcanzado. Instale siempre horizontalmente esta unidad.

VOORZORGSMAATREGELEN VOOR INSTALLATIE

De DRA-625R/425R maakt gebruik van een recentelijk ontwikkeld toestel dat warmte uitstraalt door gebruik van warmtebuizen. Aangezien de warmtebuizen een koelvloeistof bevatten, moet de DRA-625R/425R het ingestelde niveau hebben of het gewenste warmte uitstraaleffect kan niet verkregen worden. Dit toestel moet horizontaal geplaatst worden.

OBSERVERA VID INSTALLERING

DRA-625R/425R har en nyutvecklad anordning för värmeavledning med rör. Dessa rör innehåller en kylvätska och därför måste DRA-625R/425R placeras på ett vågrätt underlag eftersom annars korrekt värmeavledningseffekt inte kan erhållas. Ställ alltid upp apparaten horisontellt.

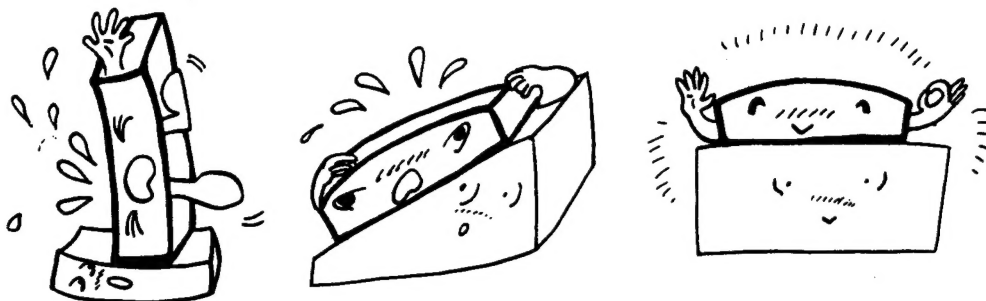

"SERIAL NO. _____
PLEASE RECORD UNIT SERIAL NUMBER ATTACHED TO THE REAR OF THE
CABINET FOR FUTURE REFERENCE"

For United Kingdom Model only.

WARNING:

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral
Brown: Live

Die Deutsche Bundespost informiert**Sehr geehrter Rundfunkteilnehmer,**

Dieses Gerät ist von der Deutschen Bundespost als Ton- bzw. Fernseh-Rundfunkempfänger zugelassen. Es entspricht den zur Zeit geltenden Technischen Vorschriften der Deutschen Bundespost und ist zum Nachweis dafür mit der DBP-Prüfnummer... gekennzeichnet. Bitte überzeugen Sie sich selbst. Dieses Gerät darf im Rahmen der nachstehend abgedruckten „Allgemeinen Genehmigung für Ton- und Fernseh-Rundfunkempfänger“ in der Bundesrepublik Deutschland betrieben werden. Beachten Sie aber bitte, daß aufgrund dieser Allgemeinen Genehmigung nur Sendungen des Rundfunks empfangen werden dürfen. *) Wer unbefugt andere Sendungen (z.B. des Polizeifunks, des Seefunks, der öffentlichen beweglichen Landfunkdienste) empfängt, verstößt gegen die Genehmigungsaufgaben und macht sich daher nach § 15 Absatz 2a des Gesetzes über Fernmeldeanlagen strafbar.

Die Kennzeichnung mit der DBP-Prüfnummer bietet Ihnen die Gewähr, daß dieses Gerät keine anderen Fernmeldeanlagen einschließlich Funkanlagen stört. Die Zusatzbuchstaben S, SE oder SK bei der DBP Prüfnummer besagen außerdem, daß das Gerät gegen störende Beeinflussungen durch andere Funkanlagen (z.B. des Amateurfunks, des CB-Funks) weitgehend unempfindlich ist. Sollten ausnahmsweise trotzdem Störungen auftreten, so wenden Sie sich bitte an die örtlich zuständige Funkstörungsmeßstelle.

Allgemeine Genehmigung für Ton- und Fernseh-Rundfunkempfänger

Die Allgemeine Ton- und Fernseh-Rundfunkgenehmigung vom 11.12.1970 (veröffentlicht im Bundesanzeiger Nr. 234 vom 16.12.1970) wird unter Bezug auf Abschnitt III der Genehmigung durch folgende Fassung der Allgemeinen Genehmigung für Ton- und Fernseh-Rundfunkempfänger gemäß den §§ 1 und 2 des Gesetzes über Fernmeldeanlagen ersetzt.

Genehmigung für Ton- und Fernseh-Rundfunkempfänger

1. Die Errichtung und der Betrieb von Ton- und Fernseh-Rundfunkempfängern werden nach §§ 1 und 2 des Gesetzes über Fernmeldeanlagen in der Fassung der Bekanntmachung vom 17.3.1977 (BGBl. I, S. 459) allgemein genehmigt.
2. Ton- und Fernseh-Rundfunkempfänger im Sinne dieser Genehmigung sind Funkanlagen gemäß § 1 Abs. 1 des Gesetzes über Fernmeldeanlagen, die ausschließlich die für Rundfunkempfänger zugelassenen Frequenzabstimmbereiche**) aufweisen und zum Aufnehmen und gleichzeitigen Hör- oder Sichtbarmachen von Ton- oder Fernseh-Rundfunksendungen bestimmt sind. Zum Empfänger gehören auch eingebaute oder mit ihm fest verbundene Antennen sowie bei Unterteilung in mehrere Geräte die funktionsmäßig zugehörigen Geräte. Außer für den Empfang von Rundfunksendungen dürfen Ton- und Fernseh-Rundfunkempfänger nur mit besonderer Genehmigung der Deutschen Bundespost für andere Fernmelde Zwecke zusätzlich benutzt werden. In den Empfänger eingebaute oder sonst mit ihm verbundene Zusatzgeräte (z.B. Ultraschallfermeldeanlagen, Infrarotfermeldeanlagen) werden von dieser Genehmigung nicht erfaßt (ausgenommen die Einrichtungen zum Empfang des Verkehrs Rundfunks). Desgleichen sind andere technische Empfangseigenschaften, die über den eigentlichen Zweck eines Rundfunkempfängers hinausgehen (z.B. zum Empfang anderer Funkdienste, für die Wiedergabe im Rahmen von Textübertragungsverfahren) hierdurch nicht genehmigt. Hierfür gelten besondere Regelungen.

Diese Genehmigung wird unter nachstehenden Auflagen erteilt.

1. Ton- und Fernseh-Rundfunkempfänger müssen den jeweils geltenden Technischen Vorschriften für Ton- und Fernseh-Rundfunkempfänger entsprechen. Eingebaute Zusatzgeräte müssen den für sie geltenden Bestimmungen und technischen Vorschriften genügen. Änderungen der Technischen Vorschriften, die im Amtsblatt des Bundesministers für das Post- und Fernmeldewesen veröffentlicht werden, muß bei schon errichteten und in Betrieb genommenen Ton- und Fernseh-Rundfunkempfängern nachgekommen werden, wenn durch den Betrieb dieser Rundfunkempfänger andere elektrische Anlagen gestört werden. Serienmäßig hergestellte Ton- und Fernseh-Rundfunkempfänger müssen zum Nachweis dafür, daß sie den Technischen Vorschriften entsprechen, mit einer DBP-Prüfnummer gekennzeichnet sein.***) Die DBP-Prüfnummer sagt über die elektrische und mechanische Sicherheit und die Einhaltung der Strahlenschutzbestimmungen nichts aus.

2. Ton- und Fernseh-Rundfunkempfänger dürfen an ortsfesten oder nichtortsfesten Rundfunk-Empfangsantennenanlagen, Verteilanlagen oder Kabelfernsehanlagen betrieben und im Rahmen der Bestimmungen über private Drahtfermeldeanlagen mit Drahtfermeldeanlagen verbunden werden. Auf demselben Grundstück oder innerhalb eines Fahrzeuges dürfen Ton- und Fernseh-Rundfunkempfänger mit anderen Geräten oder sonstigen Gegenständen (z.B. Plattenspieler, Magnetaufzeichnungs- und -Wiedergabegeräte, Antennen) verbunden werden, sofern diese Geräte von der Deutschen Bundespost genehmigt sind oder keiner Genehmigung bedürfen. Die räumliche Kombination von Funkanlagen mit Ton- oder Fernseh-Rundfunkempfängern ist nur dann zulässig, wenn die betreffenden Funkanlagen je für sich genehmigt sind.
3. Mit Ton- oder Fernseh-Rundfunkempfängern dürfen aufgrund dieser Genehmigung nur Sendungen des Rundfunks empfangen werden, also übertragene Tonsignale (Musik, Sprache) und Fernsehsignale (nur Bildinformationen). Andere Sendungen (z.B. des Polizeifunks, der öffentlichen beweglichen Landfunkdienste, Datenübertragungen) dürfen nicht aufgenommen werden, werden sie jedoch unbeabsichtigt empfangen, so dürfen sie weder aufgezeichnet, noch anderen mitgeteilt, noch für irgendwelche Zwecke ausgewertet werden. Das Vorhandensein solcher Sendungen darf auch nicht anderen zur Kenntnis gebracht werden.
4. Durch Ton- oder Fernseh-Rundfunkempfänger darf der Betrieb anderer elektrischer Anlagen nicht gestört werden.
5. Änderungen der Ton- oder Fernseh-Rundfunkempfänger, die die zulässigen Frequenzabstimmbereiche der Empfänger erweitern, gehen über den Umfang dieser Genehmigung hinaus und bedürfen vor ihrer Ausführung einer besonderen Genehmigung der Deutschen Bundespost. Wer aufgrund dieser Genehmigung einen Ton- oder Fernseh-Rundfunkempfänger betreibt, hat bei einer Änderung der kennzeichnenden Merkmale von Ton- oder Fernseh-Rundfunksendem (insbesondere bei Änderung des Sendeverfahrens oder bei Frequenzwechsel) die ggf. notwendig werdenden Änderungen an den Rundfunkempfängern auf seine Kosten vornehmen zu lassen.
6. Die Deutsche Bundespost ist berechtigt, Rundfunkempfänger und mit ihnen verbundene Geräte darauf zu prüfen, ob die Auflagen der Genehmigung und die Technischen Vorschriften eingehalten werden. Den Beauftragten der Deutschen Bundespost ist das Betreten der Grundstücke oder Räume, in denen sich Ton- oder Fernseh-Rundfunkempfänger befinden, zu den verkehrsüblichen Zeiten zu gestatten. Befinden sich die Rundfunkempfänger oder mit ihnen verbundene Geräte nicht im Verfügungsbereich desjenigen, der die Empfänger betreibt, so hat er den Beauftragten der Deutschen Bundespost Zutritt zu diesen Teilen zu ermöglichen.

III.

Bei Funkstörungen die nicht durch Mängel der Rundfunkempfänger oder der mit ihnen verbundenen Geräte verursacht werden, können die Funkmeßdienste der Deutschen Bundespost zur Feststellung der Störung in Anspruch genommen werden.

IV.

1. Diese Genehmigung kann allgemein oder durch die örtlich zuständige Oberpostdirektion einem einzelnen Betreiber gegenüber für einen bestimmten Rundfunkempfänger widerrufen werden. Ein Widerruf ist insbesondere zulässig, wenn die unter Abschnitt II aufgeführten Auflagen nicht erfüllt werden. Anstatt die Genehmigung zu widerrufen, kann die Deutsche Bundespost anordnen, daß bei einem Verstoß gegen eine Auflage ein Ton- oder Fernseh-Rundfunkempfänger außer Betrieb zu setzen ist und erst bei Einhaltung der Auflagen wieder betrieben werden darf. Die Auflagen dieser Genehmigung können jederzeit ergänzt oder geändert werden.
2. Diese Genehmigung ersetzt die Allgemeine Ton- und Fernseh-Rundfunkgenehmigung vom 11.12.1970. Sie gilt ab 1.7.1979.

Bonn, den 14.5.1979

Der Bundesminister
für das Post- und Fernmeldewesen
im Auftrag
Haist

*) Zum Empfang anderer Sendungen darf dieses Gerät nur mit Genehmigung der Deutschen Bundespost benutzt werden. Allgemein genehmigt ist zur Zeit der Empfang der Aussendungen von Amateurfunkstellen und der Normalfrequenz- und Zeitzeichensendungen.

**) Siehe Technische Vorschriften für Ton- und Fernseh-Rundfunkempfänger, veröffentlicht im Amtsblatt des Bundesministers für das Post- und Fernmeldewesen.

***) Für ausnahmsweise noch nicht gekennzeichnete, vor dem 1.7.1979 errichtete und in Betrieb genommene Ton-Rundfunkempfänger wird die Kennzeichnung nicht verlangt.

15 TAPE SELECTOR (Tape selector switch)

Toggle keys have been used for selection of TAPE-1 and TAPE-2. Pressing them an uneven number of times turns the function on, pressing them an even number of times turns the function off.

- TAPE-1: Used to play a tape deck connected to the TAPE-1 terminal.
- TAPE-2: Used to play a tape deck connected to the TAPE-2 terminal.

Tape-to-Tape Dubbing

- ① Connect the two tape decks to this unit as shown in the connections.
- ② Load the original tape in tape deck 1 and the blank tape in tape deck 2.
- ③ Press the TAPE-1 Selector Button 15 (indicator lights).
- ④ Put tape deck 1 in the playback mode and tape deck 2 in the recording mode. Follow tape deck operating instructions.
- ⑤ The recording can be monitored through the speakers or headphones. (If tape deck 2 has three heads, the just-recorded signal can be monitored when the tape 2 button is pressed.)

16 TUNING (Tuning Buttons)

Use these buttons for either manual tuning or automatic tuning.

- UP: When this button is pressed, the tuning goes up the band.
- DOWN: When this button is pressed, the tuning goes down the band.
- Manual Tuning (Set the TUNING MODE 21 "MANU" by pushing the TUNING MODE Button 16.)
In FM mode, the frequency indicator moves in 50 kHz steps. In am, the indicator moves in 9 kHz steps. If the button is pressed for more than 1 second, the indicator moves quickly and continuously up or down until released.

- Automatic Tuning (Set the TUNING MODE 21 "AUTO" by pushing the TUNING MODE Button 16.)

For example, when the "up" button is pressed, the frequency indicator moves up the band until a broadcast signal is received.

If no more signals are detected, the indicator moves to the upper limit and starts from the lower end.

(When the "down" button is pressed, the indicator travels down in the same way.)

While the button is continuously pressed, broadcast signals cannot be tuned; the indicator continuously travels up or down the band. Automatic tuning is only provided for radio stations of usable strength; a sudden strong noise may disturb automatic tuning.

When the desired signal is weak, use manual tuning.

17 SHIFT (Shift Button)


This switch is used to change eight preset buttons 19 to 1 ~ 8 channels or 9 ~ 16 channels. The SHIFT [A]/[B] is then on. Each recycle shifts from SHIFT [A] to SHIFT [B]. If storing or retrieving data into or from the preset 1 ~ 8 channels, specify SHIFT [A]. Similarly, to use preset 9 ~ 16 channels, specify SHIFT [B].

18 MEMORY (Memory Button)

This switch is used to register the desired radio station to one of the preset buttons memory. When pressing this button, the memory indicator 25 lights for approximately 5 seconds. During this interval, the desired station can be registered in the memory.

19 PRESET CHANNEL 1 ~ 16 (Station Presetting Buttons)

These buttons are used for storing or calling station. With the shift button 17 you can preset 1 ~ 8 and 9 ~ 16 channels, a total of 16 AM and FM stations in eight preset buttons. When the preset channel buttons are in operation, an indicator (SHIFT [A]/[B]) illuminates. When radio stations are memorized with these buttons, a desired station can be easily tuned in without pressing the tuning buttons.

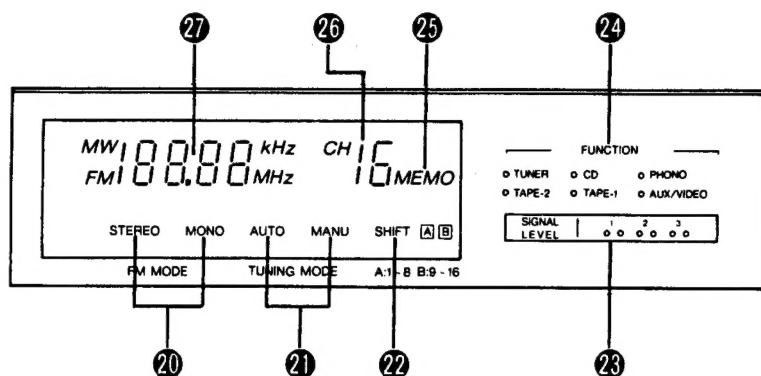DISPLAY**20 FM MODE (STEREO/MONO Indicator)**

Lights automatically when receiving a stereo signal in the "STEREO" mode. Does not light for stereo reception in the "MONO" mode.

21 TUNING MODE (AUTO/MANUAL)

Pressing TUNING MODE 16 causes AUTO and MANU to light up alternately.

22 SHIFT [A]/[B] (Shift Indicator)

The preset channel which is selected with the Shift Button 17 is displayed by the SHIFT [A] or [B].

23 SIGNAL LEVEL (Signal-Level Indicators)

This indicator shows the signal strength level of AM and FM broadcast station. The best position for reception is obtained when the maximum number of indicator lamps are illuminated.

24 FUNCTION (Input Selector Indicator)

The program source selected by Input Select Switch or Tape Select Switch is displayed by the indicator.

25 MEMO (Memory Indicator)

This indicator lights when the MEMORY button 18 is pressed.


26 CHANNEL

When using the channel preset button 19, the channel is displayed and the frequency for that channel stored in memory is displayed in 27.

27 FREQUENCY DISPLAY (Frequency Indicator)

The frequency is displayed in numerals. It is displayed in MHz for FM and in kHz for MW.

BACK PANEL

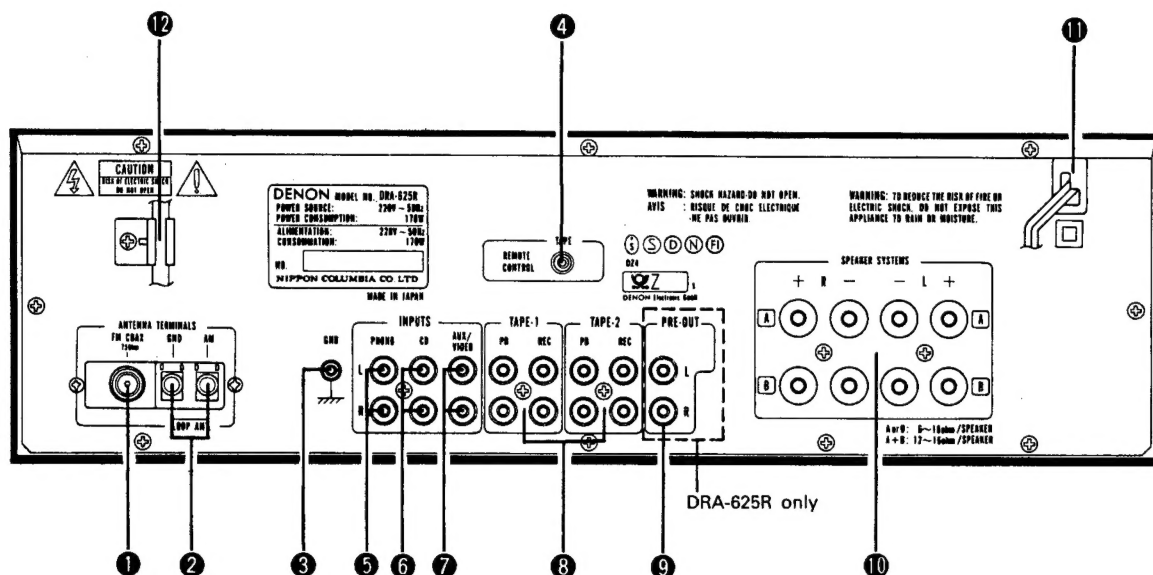**1 FM ANT (FM Antenna Terminals)**

75-ohms coaxial cable can be connected to this terminal. For antenna connecting procedure, see the ANTENNA INSTALLATION (page 7).

2 AM ANT (AM Antenna Terminals)

Connect the attached AM loop antenna. (Refer to page 7 for connection). Connect to this terminal when a medium wave outdoor antenna is used.

3 GND (Grounding Terminal)

The grounding wire of the turntable is connected here.

- Hum or noise may be generated if the grounding wire is not connected.

4 TAPE/REMOTE CONTROL

This terminal is exclusively used for sending the remote control signals to the tape deck. Connect it with a 3.5mm mini-jack cord.

Note:

Do not hook up a headphones or microphone jack cord. Use this jack to connect a Denon cassette deck with a remote control jack (wired). If the cassette deck does not have this jack, wired remote control is not possible.

5 PHONO (Phono Input Terminals)

The output cord of the turntable is connected here. Since the input sensitivity of "PHONO" is extremely high, do not use the unit without the input pin cord. If used without this cord, the speakers may generate hum.

6 CD

The output cord of the CD player is connected here.

7 AUX/VIDEO

An AUX/VIDEO, such as a VCR or Video Disk may be connected here.

8 TAPE-1, TAPE-2 (Audio Playback and Recording Terminals)

Tape decks can be connected for full use including playing or copying.

9 PRE-OUT (DRA-625R only)

Output signals for power amplifiers are sent from these jacks. The rated output is 1.0 volts. The signals do not pass through the bass and treble circuits.

10 SPEAKER SYSTEMS (Speaker Terminals)

Two pairs of speakers A and B can be connected to these terminals.

11 AC CORD (Power Cord)

Connect this cord into the wall outlet.

12 AM LOOP ANT (AM Loop Antenna)

Correctly connect the AM loop antenna to the antenna terminal. Broadcasting cannot be received when the connection is incomplete.

Adjust the antenna for optimum reception while receiving the medium wave broadcasting. Do not place a pin cord, SP cord or electric cord near the antenna. This may cause noise generation.

Note:

- Two FM antennas should not be connected simultaneously.
- Even if an external AM antenna is used, the AM loop antenna should not be disconnected.
- AM loop antenna lead terminals do not touch the metal part of the back panel.

ANTENNA INSTALLATION

FM ANTENNA

The T-type indoor antenna (300 ohm) can be used inside wooden houses for local FM stations and strong signals. Orient the T-shaped part for optimum reception and mount the antenna on the wall or ceiling. (FM indoor antennas may not consistently ensure stable reception, due to environment changes. In such cases use an FM indoor antenna temporarily until an outdoor antenna is installed.)

75 ohms coaxial cable (3C-2V, 5C-2V) is preferable to obtain better performance of the tuner.

(To use of a 300 ohm FM outdoor antenna, connect to the 300 ohm terminals.)

AM ANTENNA

Attach the accessory AM loop antenna to the antenna holder on the back panel.

Connect the leads to AM and GND terminal. Use this terminal also for an outdoor antenna.

Orient the loop antenna horizontally to obtain optimum reception. Where broadcast stations are distant and only weak signals are received, or where signals are blocked by obstacles, install an AM outdoor antenna.


GROUNDING

If there is reception noise, use of grounding wire is recommended.

Connect a thick insulated wire to the "GND" terminal, and attach the unconnected bare end to a metal water pipe, grounding rod, or grounded copper plate.

* Never connect the grounding wire to a gas pipe. This could cause fire or explosion.


CONNECTIONS

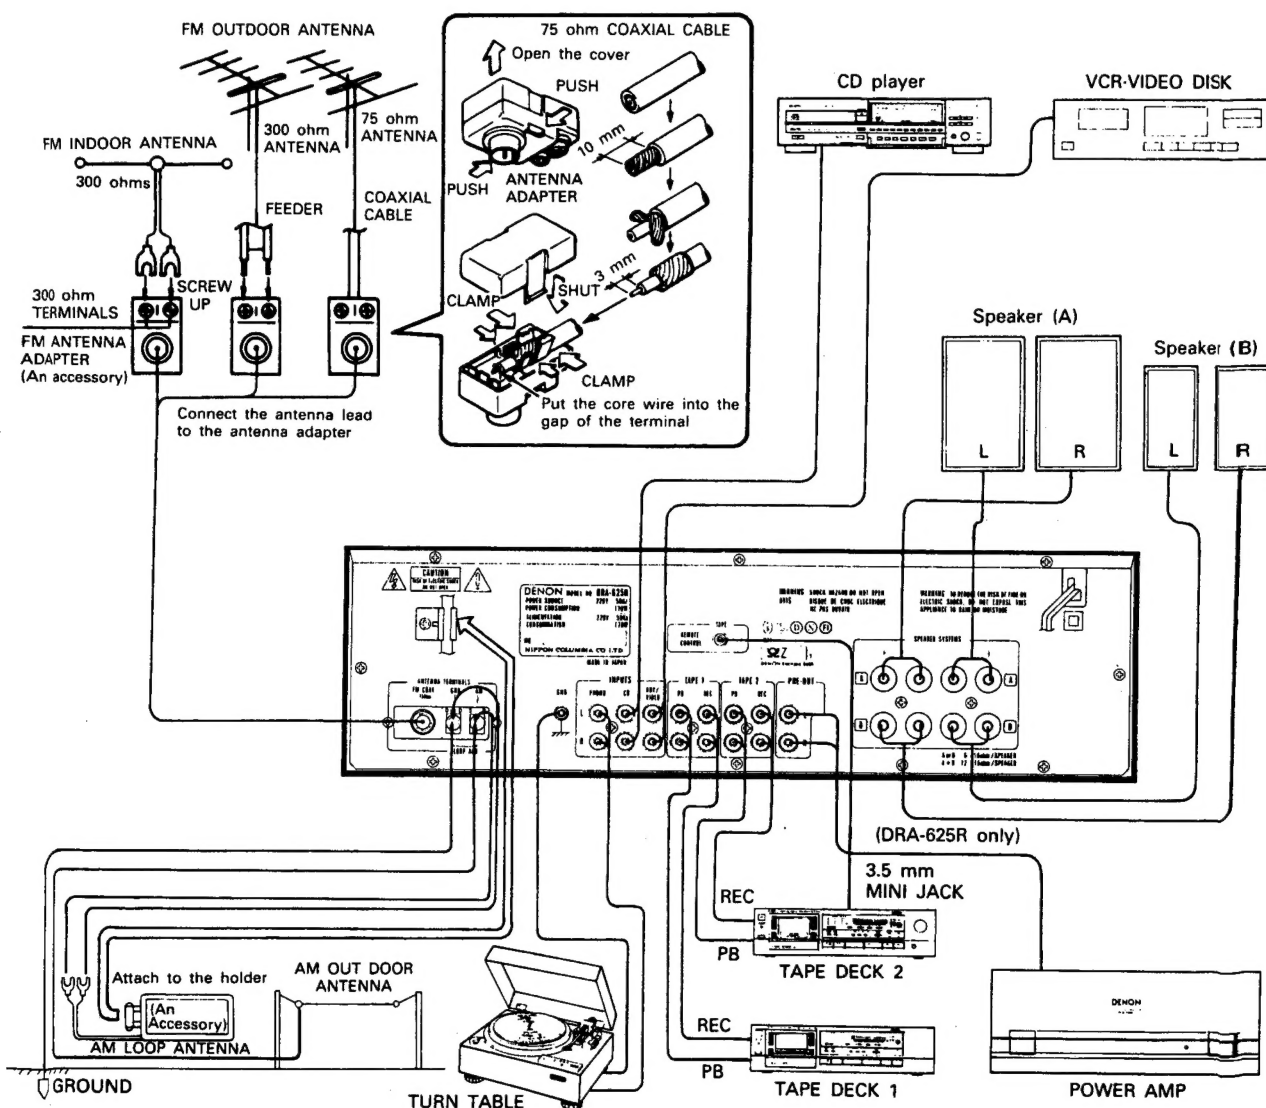

SPEAKER CONNECTION

Confirm polarity (+, -) and left and right channels (L, R). Connect the speaker pairs to the SPEAKER terminals A or B on the back panel. Connections must be made with power cord disconnected.

1. Peel off the sheathing from the end of the cord.
2. Twist the wire strands.
3. Loosen the speaker terminal, insert the wire lead portion of the cord, and then tighten the terminals.

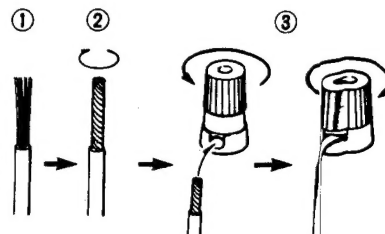

CAUTION

Protective Circuit

This set is equipped with a high speed protective circuit. This circuit protects the internal circuitry from damage due to large currents flowing when the speaker jacks are not completely connected or when an output is generated by a short circuit.

This protective circuit's operation cuts off the output to the speakers. In such a case, be sure to turn the power to the set off and check the connections to the speakers. Then turn the power on again. After muting for several seconds, the set will operate normally.

HOW TO PRESET THE STATION

1. Set the BAND SELECT button to "AM" or "FM", and press the TUNING button to tune the desired station.
2. Specify the preset buttons 1 ~ 8 or 9 ~ 16 by the SHIFT button.
3. Press the MEMORY buttons and MEMORY indicator lights for about 5 seconds. During this time, press one of the eight PRESET channel buttons.
4. The channel corresponding to the pressed button is displayed and the indicated frequency is stored in memory for that channel.

NOTE: If preset button is inoperative with MEMORY illuminated, press MEMORY and preset buttons again.


- This model has a last channel memory system. It stores the last channel used power off.
- This model is designed to store and retain the stations that have been previously registered in the memory, even if the tuner is deenergized temporarily. The memory can hold registered data for approximately about a month [Temperature: 68°F (20°C), relative humidity: 65%]. If the memory is erased reset the preset data.

PLAYBACK USING THE REMOTE CONTROL


The accessory RC-111 remote control unit is used to control the RECEIVER from a distance.

(1) Inserting the dry cell batteries


- 1 Remove the rear cover on the remote control unit.

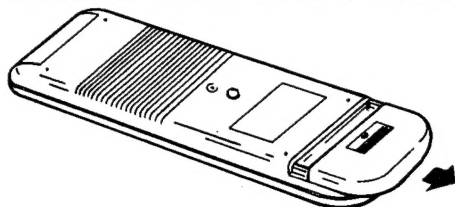

- 2 Insert two size R03 (AAA) dry cell batteries as shown in the diagram on the battery supply unit.

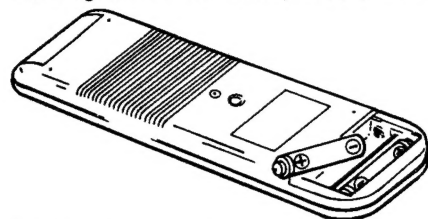

- 3 Replace the rear cover.

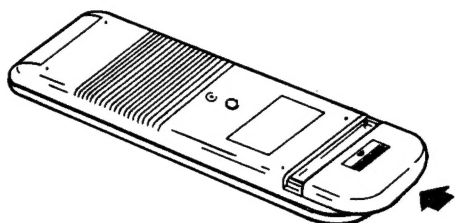


Notes on Use of the Batteries

- The remote control unit uses size R03 (AAA) dry cell batteries.
- The batteries will need to be replaced approximately once a year. This will depend upon how often the remote control is used.
- If, in less than a year from the time new batteries were inserted, the remote control fails to operate this unit from a near-by position, it is time to replace the batteries.
- Insert the batteries properly, following the diagram on the remote control battery supply unit, and making sure to align the plus and minus sides of each battery.
- Batteries are prone to damage and leakage. Therefore:
 - Do not combine new batteries with used ones.
 - Do not combine different types of batteries.
 - Do not jumper the opposite poles of the batteries, expose them to heat or break them open, or put them into open fire.
- When the remote control is not to be used for a long period of time, remove the batteries from the unit.
- If the batteries have leaked, remove any battery fluid from the inside of the battery supply unit by wiping it out thoroughly, and insert new batteries.

CAUTION

It may be difficult to operate the remote unit with a fluorescent light near the set, in particular near the remote control sensor, but this is not a malfunction. Should this happen, move the fluorescent light away from the set.

(2) Directions for use

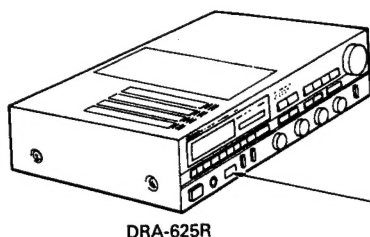

- Operate the remote control unit while it is pointed toward the photosensitive window, as shown in the diagram below.
- The remote control unit can be used at distances up to about 8 meters in a straight line away from this unit. This distance will decrease if there are obstructions in the way of the transmission or if the light shaft is not directed straight at this unit.

Note on Operation


- Do not press the operating buttons on the receiver and the remote control unit at the same time. This will cause misoperation.
- Operation of the remote control will become less effective if the infrared photosensitive window is exposed to strong light or if there are obstructions between the remote control unit and the photosensitive window.
- In case you operate your VCR, TV or other components by remote control, do not operate buttons on two different remote control units at the same time. This will cause mis-operation.

Operate not only the DRA 625R or 425R receiver but also a cassette deck and a CD player from the handy full-system remote control pad.

Remote Control Section

Full-system Remote Control

The full-system remote control operates all of the important functions of the receiver such as function switching, volume control, and tuner memory. But that's not all! The same control pad can also control the important functions of a CD player and cassette deck when combined with the DRA 625R or 425R to create a remarkably ergonomic and versatile DENON system with all the quality sound reproduction that the devoted audiophile expects.

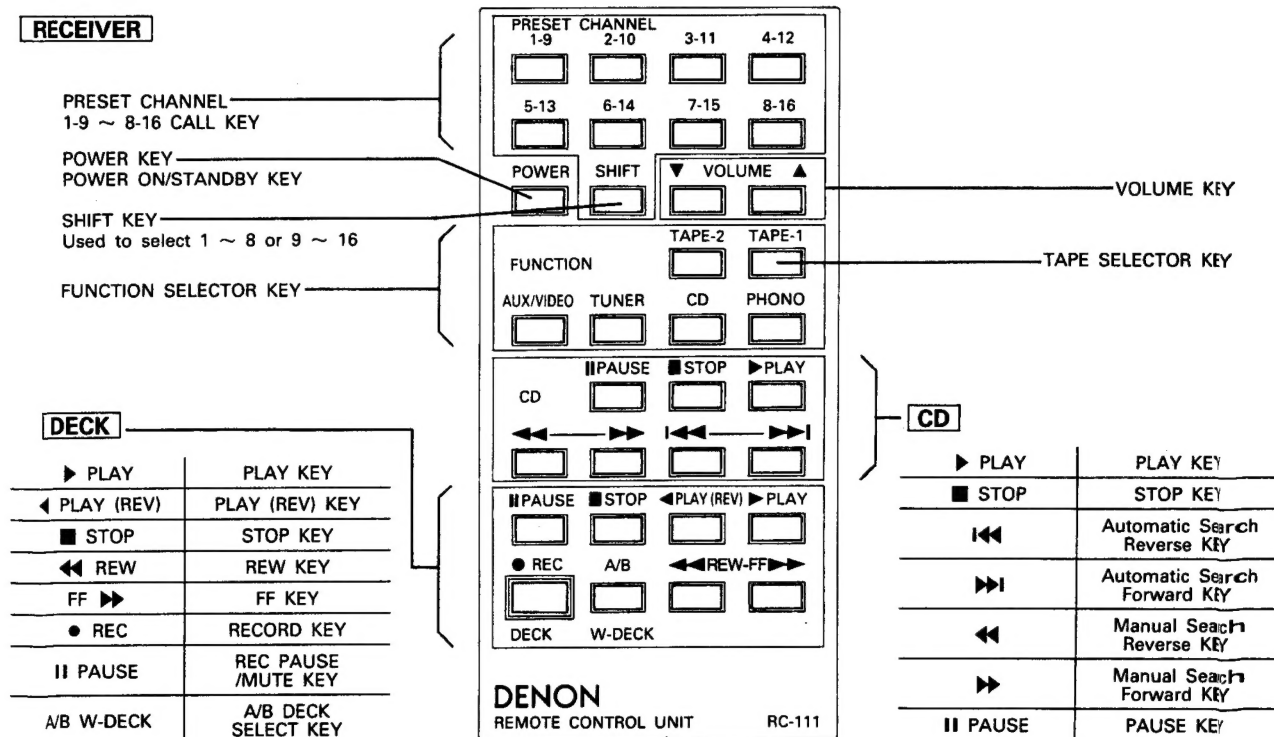

- The RC-111 Remote Control Units control CD players (exclude DCD-1800R) and cassette decks made by DENON.
 - The upper row is the indicator for RECEIVER and the lower row is the indicator for CD player and Cassette Deck.
- For details of each operation, see the instruction manual for the CD player or cassette deck.

CAUTION:

- If the power is turned off with the remote control unit, the receiver is switched to the power stand-by state. If you are to be absent for a long period of time, be sure to turn the power off using the POWER switch on the receiver.
- In the standby mode, one of the input selector indicators ② remains lit.
- You may experience erratic operation of the remote control unit if it is operated in fluorescent light and direct sunlight, in particular if this light strikes the remote control sensor on the receiver. However, this is not a malfunction, and if this should happen, protect the sensor against such light.

TROUBLESHOOTING

1. Have all connections been made properly?
2. Have you followed all operational instructions correctly?
3. Check speaker and the turntable systems for proper operation.

When your unit does not seem to be operating correctly, first check the items in the following table. If the symptom does not correspond to any of the problems as shown below, turn off the power sources immediately and contact your DENON dealer.

Problem	Cause	Remedy
FM AND AM RECEPTION		
Radio program can not be received.	<ul style="list-style-type: none"> • Antenna connection is wrong. • A signal strength is weak. 	<ul style="list-style-type: none"> • Check the connection. • Check the antenna installation.
Noise is reproduced.	<ul style="list-style-type: none"> • A signal strength is weak. • Automobile ignition noise interferes with reception. • Other electrical equipment interferes with reception. 	<ul style="list-style-type: none"> • Install an outdoor antenna. • Keep the antenna away from the street. • Keep the equipment away from this set, or turn off the power of the other equipment.
The preset frequencies are erased.	<ul style="list-style-type: none"> • The memory back-up term (about 1 month) passed. 	<ul style="list-style-type: none"> • Preset again.
In automatic tuning, the frequency doesn't stop at the radio station.	<ul style="list-style-type: none"> • A signal strength is weak. 	<ul style="list-style-type: none"> • Use manual tuning
In automatic tuning, it stops at the one step lower or higher frequency than the radio station.	<ul style="list-style-type: none"> • Noise or strong signal strength is received. 	<ul style="list-style-type: none"> • Use manual tuning for optimum reception.
PLAYBACK OF THE AUDIO EQUIPMENTS		
No sound is produced with power on.	<ul style="list-style-type: none"> • Input and speaker cords connection are wrong. • Speaker switch is off. • The INPUT SELECTOR buttons are in wrong position. • The protective circuit is operating. • The fuse has blown out. 	<ul style="list-style-type: none"> • Check the connection. • Turn on speaker switch. • Check these position. • Turn the power off once, check the connections to the speakers, then turn the power on again. • Ask your dealer, or the nearest DENON representative.
Audible hum when playing records.	<ul style="list-style-type: none"> • The input and grounding cords connection of the turntable are wrong. • The cords connection of the cartridge are wrong. • The interference from the nearby TV or radio transmission antenna. 	<ul style="list-style-type: none"> • Check the connection. • Check the connection. • Ask your dealer, or the nearest DENON representative.
Howling is produced when the volume control is turned up too high while playing records.	<ul style="list-style-type: none"> • The vibrations and sounds transmit from the speakers to the turntable. 	<ul style="list-style-type: none"> • Insulate the vibrations, or keep the speakers away from the turntable.
Cracking noise is produced when playing records.	<ul style="list-style-type: none"> • The record is stained with the dust. • The stylus tip of the cartridge is stained with the dust. • The cartridge is defective. 	<ul style="list-style-type: none"> • Clean the record. • Clean the stylus tip. • Try the other cartridge.

SIGNAL FLOWING TABLE

SOURCE	TAPE-1	TAPE-2	SOUND		
			SPEAKER	TAPE 1 REC	TAPE 2 REC
PHONO	OFF	OFF	SOURCE	SOURCE	SOURCE
or CD	ON	OFF	TAPE-1	SOURCE	TAPE 1
or TUNER	OFF	ON	TAPE-2	SOURCE	SOURCE
or AUX/VIDEO	ON	ON	TAPE-2	SOURCE	TAPE 1

SPECIFICATIONS

AMPLIFIER SECTION

Continuous Power Output:	DRA625R: 90 W + 90 W (4 ohms, DIN 1 kHz T.H.D. 1%) 65 W + 65 W (8 ohms, 20 Hz ~ 20 kHz T.H.D. 0.05%) DRA425R: 70 W + 70 W (4 ohms, DIN 1 kHz T.H.D. 1%) 50 W + 50 W (8 ohms, 20 Hz ~ 20 kHz T.H.D. 0.05%)						
Power Bandwidth (IHF):	5 Hz ~ 40 kHz (T.H.D. 0.05% both channels driven at 8 ohms)						
Total Harmonic Distortion:	-3 dB power into 8 ohms <div>0.009% (DRA-625R) 0.01% (DRA-425R)</div>						
Frequency Response:	PHONO RIAA Standard Curve (Recording Output) <table><tr><td>MM</td><td>20 Hz ~ 20 kHz ±0.5 dB</td></tr><tr><td>TAPE-1-2, CD, AUX/VIDEO</td><td>20 Hz ~ 50 kHz ±1.5 dB (at 1W)</td></tr></table>			MM	20 Hz ~ 20 kHz ±0.5 dB	TAPE-1-2, CD, AUX/VIDEO	20 Hz ~ 50 kHz ±1.5 dB (at 1W)
MM	20 Hz ~ 20 kHz ±0.5 dB						
TAPE-1-2, CD, AUX/VIDEO	20 Hz ~ 50 kHz ±1.5 dB (at 1W)						
Input Sensitivity and Impedance:	PHONO MM	2.5 mV	47 k ohms				
	TAPE-1-2, CD, AUX/VIDEO	150 mV	29 k ohms				
Maximum Input Level (at 1 kHz):	PHONO MM	110 mV					
Signal to Noise Ratio (IHF-A):	PHONO MM	86 dB at 5.0 mV input					
	TAPE-1-2, CD, AUX/VIDEO	95 dB					
Tone Controls:	BASS	±8 dB at 100 Hz					
	TREBLE	±8 dB at 10 kHz					
Loudness, Control Effect:	VARIABLE LOUDNESS at 10 positions, 50 Hz/10 kHz, +10 dB/+5 dB						
Pre-out terminals							
Rated output power: (DRA-625R only)	1 V (at 100 k ohms load)						

TUNER SECTION


[FM] (note: μV at 75 ohms, 0 dBf = 1×10^{-15} W)			
Receiving Range:	87.5 ~ 108 MHz		
Usable Sensitivity:	0.9 μV (10.3 dBf)		
50 dB Quieting Sensitivity:	MONO	1.6 μV (15.3 dBf)	
	STEREO	23 μV (38.5 dBf)	
Signal to Noise Ratio (IHF-A):	MONO	82 dB	
	STEREO	78 dB	
Total Harmonic Distortion (at 1 kHz):	MONO	0.12% (DRA-625R)	
		0.15% (DRA-425R)	
	STEREO	0.25% (DRA-625R)	
		0.3% (DRA-425R)	
Capture Ratio:	1.2 dB		
Image Rejection:	70 dB		
AM Suppression:	60 dB		
Selectivity (± 300 kHz):	60 dB		
Frequency Response:	30 Hz ~ 15 kHz	+0.2 -1.5 dB	
Stereo Separation (at 1 kHz):	40 dB		
[AM]			
Receiving Range:	522 ~ 1611 kHz		
Usable Sensitivity:	18 μV		
Signal to Noise Ratio:	55 dB		
General			
Power Supply:	AC 220V, 240V/50 Hz		
Power Consumption:	170W (DRA-625R) 140W (DRA-425R)		
Dimensions:	434 mm (17-3/32")W \times 140 mm (5-1/2")H \times 350 mm (13-25/32")D		
Weight:	7.4 kg (16 lbs 5 Oz) (DRA-625R) 7.3 kg (16 lbs 1 Oz) (DRA-425R)		
REMOTE CONTROL UNIT			
Remote control system:	Infrared pulse system		
Power supply:	3V DC Two size R03 (AAA) dry cell batteries		
External dimensions:	60 mm (2-23/64")W \times 165 mm (6-31/64")H \times 16 mm (5/8")D (Includes batteries)		
Weight:	80 g (about 2 oz) (Includes batteries)		

Design and specifications are subject to change without prior notice.

REMOVAL OF EACH SECTION


1. Top Cover

- 1) Unfasten 7 screws.
- 2) Detach the top cover by means of lifting it upward.

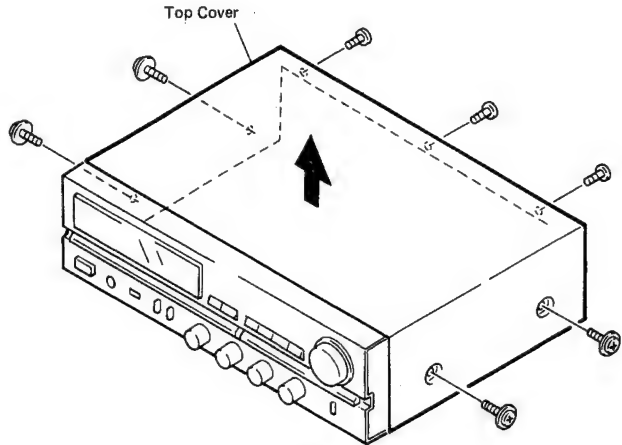


2. Front Panel

- 1) Remove 4 screws, and push 4 claws in the arrow direction to release the Front panel.
- 2) Draw out the Front Panel frontward.

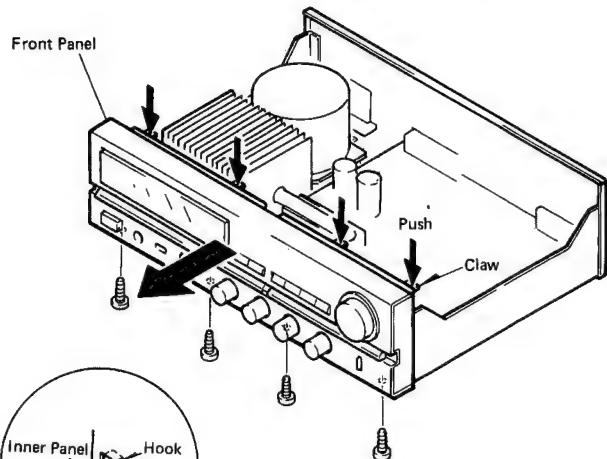


3. Inner Panel

Unfasten 8 screws (A) with nuts, and draw out the Inner Panel frontward.

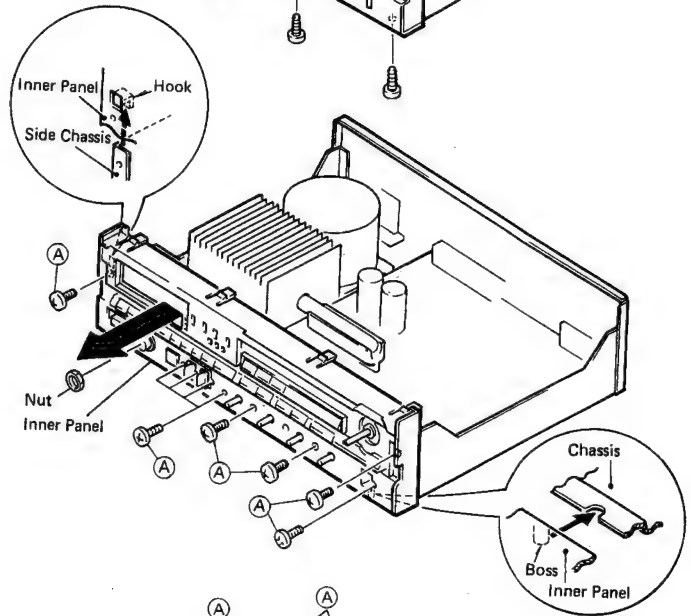


4. Bottom Cover

Remove 4 screws (A). Then pinch the head of P.C.Board holder at the two places and detach the Bottom Cover.

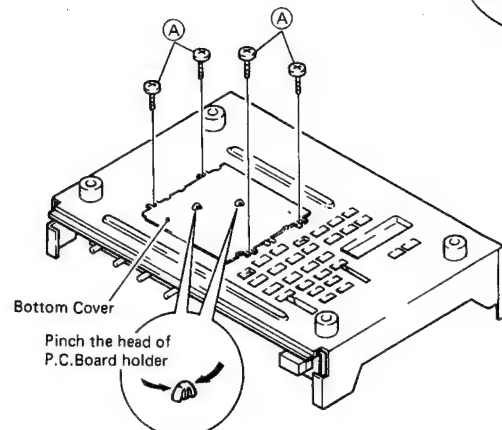


5. Power Transistor

- 1) Remove screws for the transistor to be exchanged.
- 2) Unsolder the soldered joint and remove.

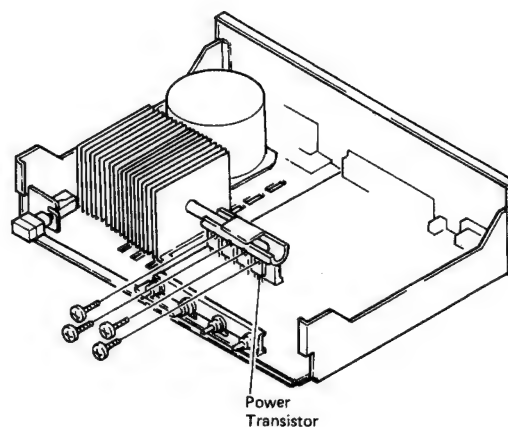


6. Heat Pipe Radiator

Remove 4 screws (A), and unfasten 2 screws (B) holding the radiator bracket. Then pull the Heat Pipe Radiator upward from the chassis.

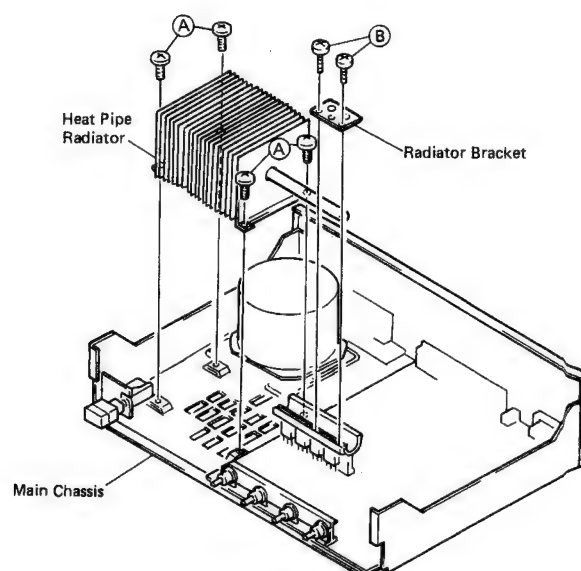

7. Amp-tuner P.W.Board

Remove 1 screw (A) securing the Board and 5 screws (B) from the Back Panel side. Then pinch the head of P.C.Board holder at the two places and take out the Board in the direction arrow shows.

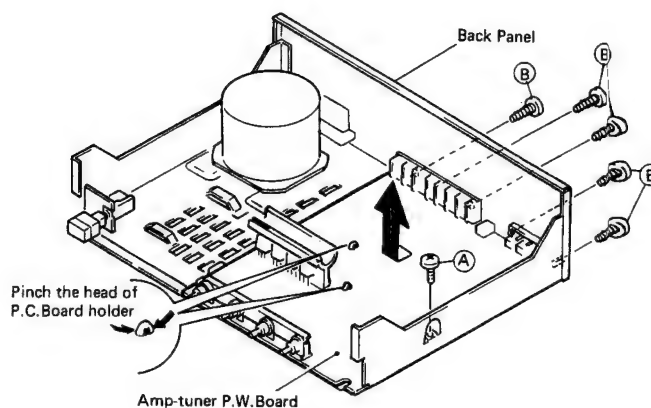

METHOD OF ADJUSTMENTS

When making adjustments, be sure the power supply is at the rated voltage and the room air is in normal condition with respect to temperature and humidity.

• Amplifier Section

1. IDLING CURRENT

(1) Set controls as follows.

POWER Switch → off (■)

VOLUME Control → 0 (min.)

SPEAKERS → off (■)

Temperature → 15°C ~ 30°C


VR305 and VR306 of the 1U-1596S-1 (DRA-625R) (1U-1606S-1, DRA-425R) (AMP. TUNER Unit) → Center

Power supply → Rated Voltage $\pm 1\%$, 50 Hz.

(2) Connect Digital Voltmeter to the test points 1 (-), 3 (+) and 2 (+), 4 (-) of the 1U-1596S-1.

(3) Turn the Power Switch on and rotate VR305 clockwise so that the Digital Voltmeter reads 5.0 mV ± 0.2 mV DC at the test point 1,3. Follow the same procedure to VR306 for test point 2, 4.

(4) Warm up three minutes, then readjust VR305 and VR306 as in step (3) so that the Digital Voltmeter reads 5.0 mV ± 0.5 mV DC.

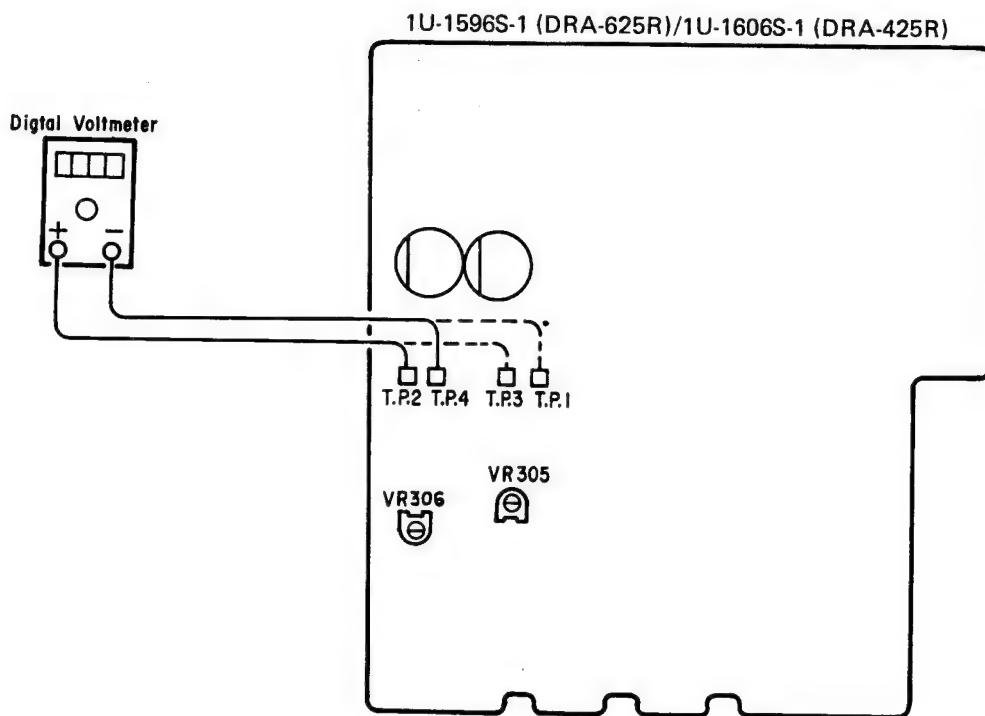

FM/MPX ALIGNMENT

Table 1

Step	Alignment Item	Tuning Frequency Setting	Input				Output			Adjust		Remarks
			Type	Frequency	Input Level	Modulation	Coupling	Type	Connect to	Points	Adjust to	
1	Tuning Center	98 MHz	FM SSG, Mono	98 MHz	60 dBμ	None	Antenna Terminal	Center Meter	T.P. 11, 12	T701	Center of Tuning Meter	Function: FM Mode: Auto
2	Distortion (Mono)	98 MHz	FM SSG, Mono	98 MHz	60 dBμ	1 kHz 100%	Antenna Terminal	Distortion Meter	TAPE REC (L)	T702	Minimum Distortion	Function: FM Mode: Auto
3	Distortion (Stereo)	98 MHz	FM SSG Stereo (L)	98 MHz	60 dBμ	Main: 1 kHz L-ch 90% Pilot: 10%	Antenna Terminal	Distortion Meter	TAPE REC (L)	IFT on Front End	Minimum Distortion	Function: FM Mode: Auto
4	Noise Center & Distortion											Repeat 1, 2 and 3 to obtain minimum distortion and same time indicating of center meter at center condition.


AM ALIGNMENT

Table 2


1	AM IF	-	AM IF Sweep	-	Input Level is not over to work A.G.C.	-	AM Antenna Terminal	Monitor-scope	R728 GND	T703	Maximum Height and Best Symmetry Curve	Function: AM Center of Wave Form: 450 kHz
2	Receiving Band Alignment	522 kHz	AM SSG	522 kHz	Input Level is not over to work A.G.C.	400 Hz 30%	Loop Antenna	Electric DC Voltmeter	R808 GND	T712	1.2V±20mV	Function: AM
3	Tracking Alignment	603 kHz	AM SSG	603 kHz	Input Level is not over to work A.G.C.	400 Hz 30%	Loop Antenna	Audio V.M.	TAPE REC (L)	T711	Maximum Output	Function: AM
		1404 kHz	AM SSG	1404 kHz	Input Level is not over to work A.G.C.	400 Hz 30%	Loop Antenna	Audio V.M.	TAPE REC (L)	TC701	Maximum Output	Function: AM

CONNECTION DIAGRAM OF MEASURING INSTRUMENTS

• FM

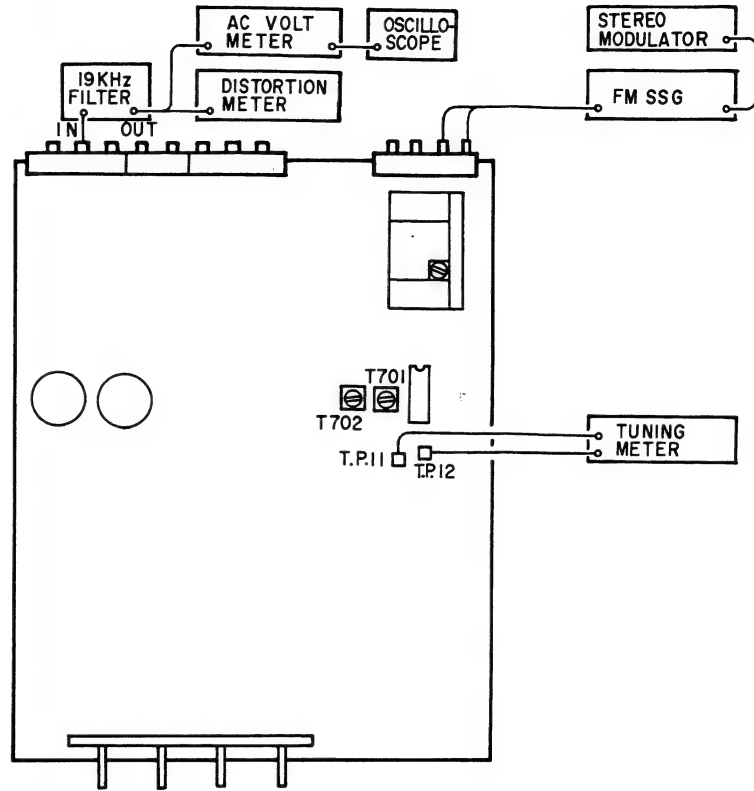


• AM

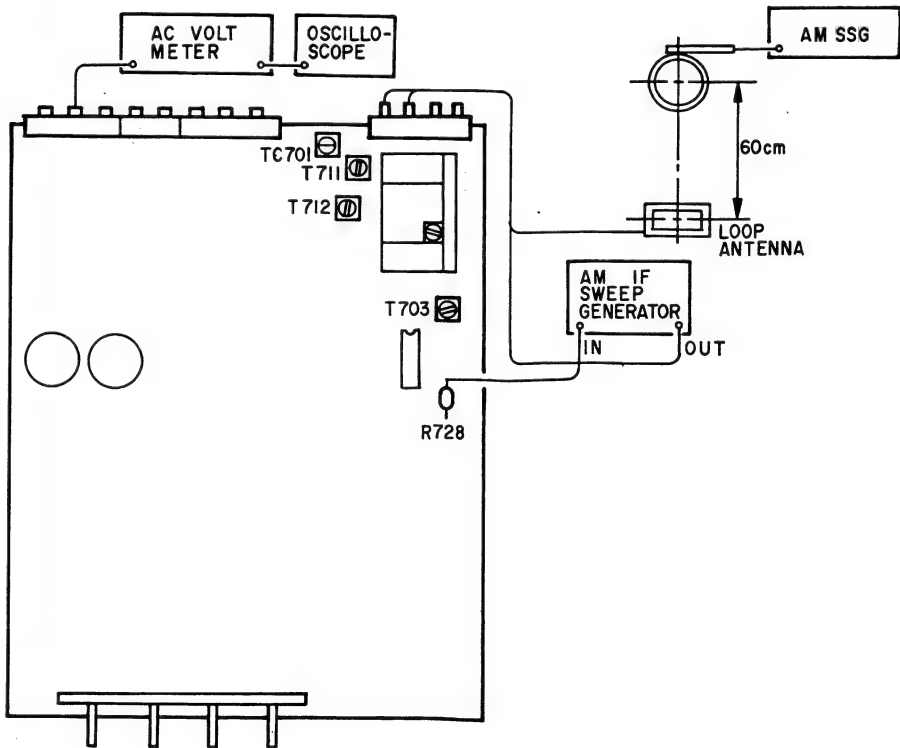


SEMICONDUCTORS


• IC's
MN1280S
(Matsushita)

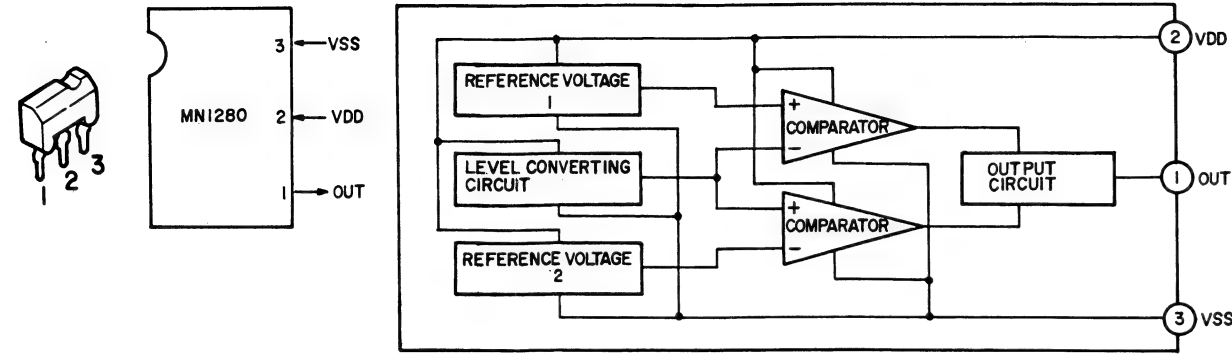


LC4966
(Sanyo)

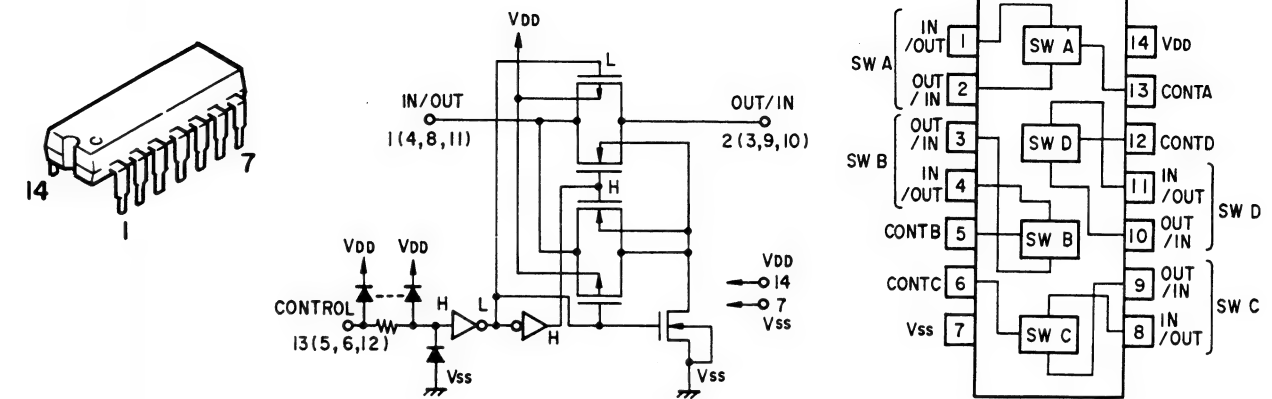


M5238P
(Mitsubishi)

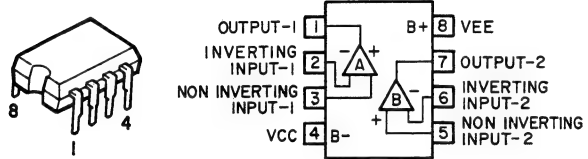


NJM2043DD
(JRC)

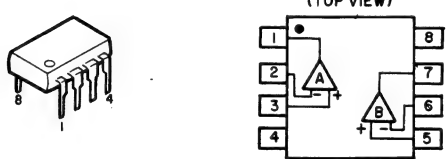


TC9172AP

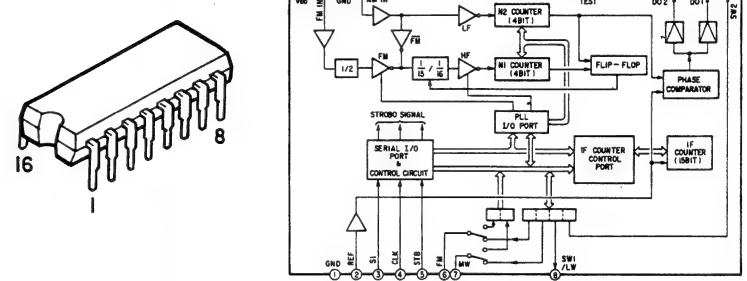


L78M12ML

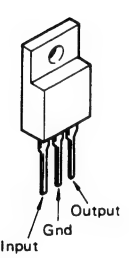


L78M05ML
(Sanyo)

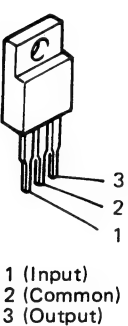


LB1403N
(Sanyo)

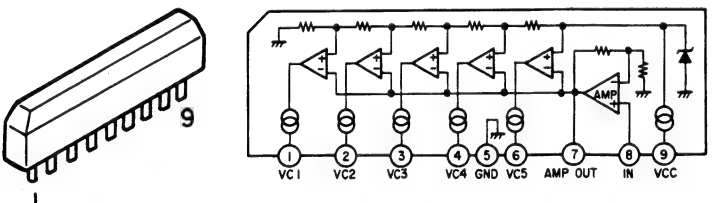




BA6229

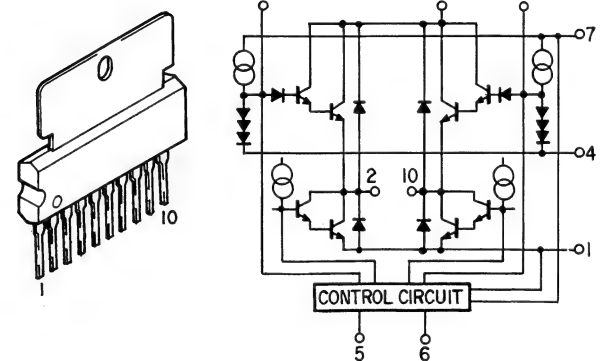




LB1294

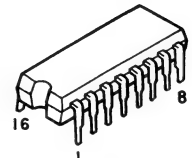



HD14082BP
(Hitachi)

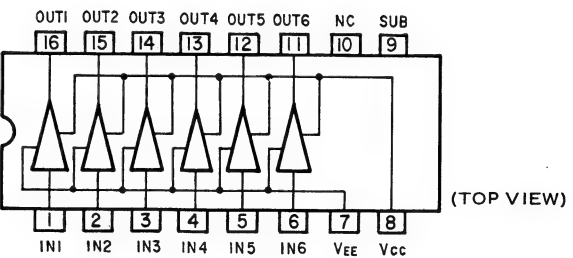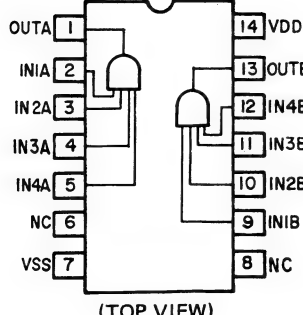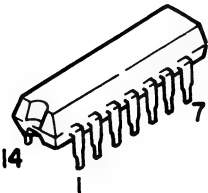



TC9173P

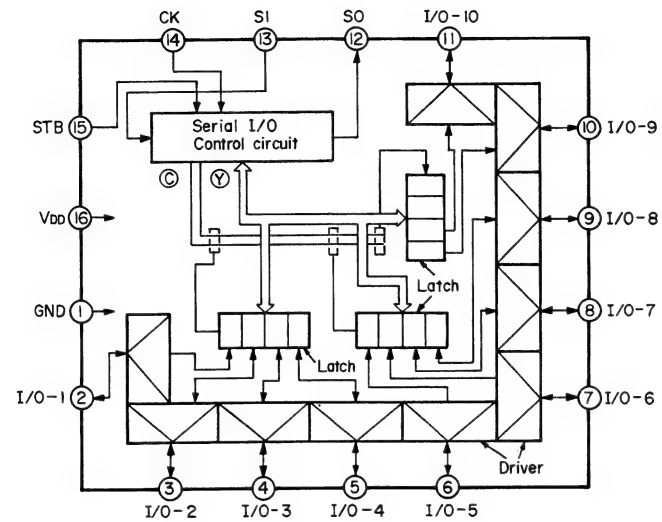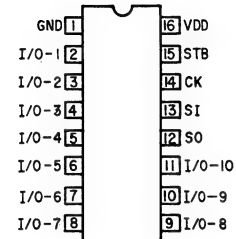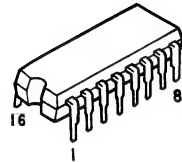


LA3401

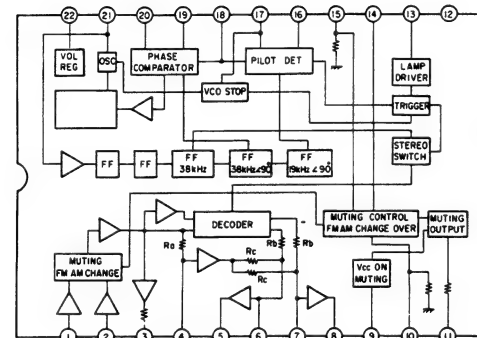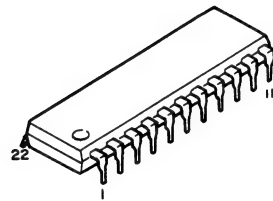



LA1266

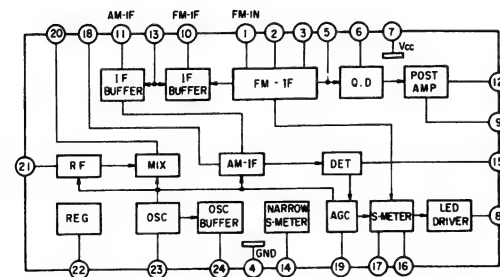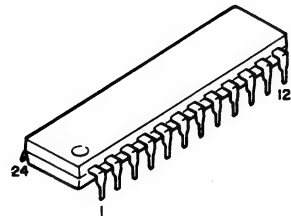



HD6305U0A63P

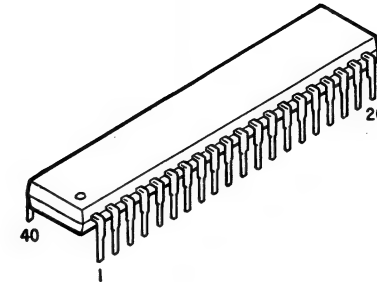

(TOP VIEW)

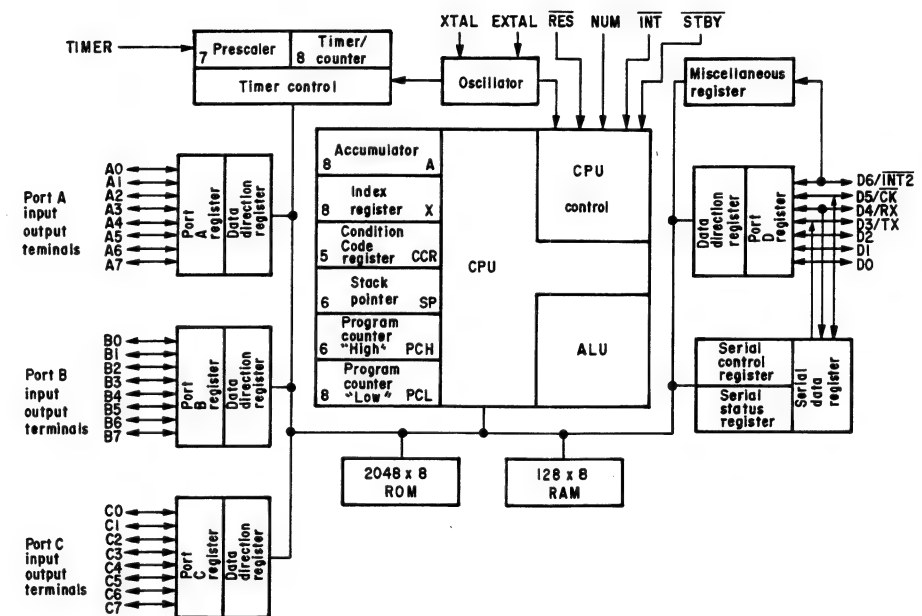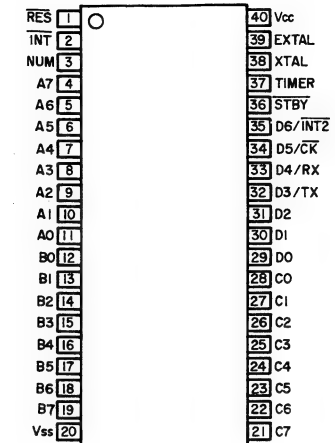


TC9303AN013

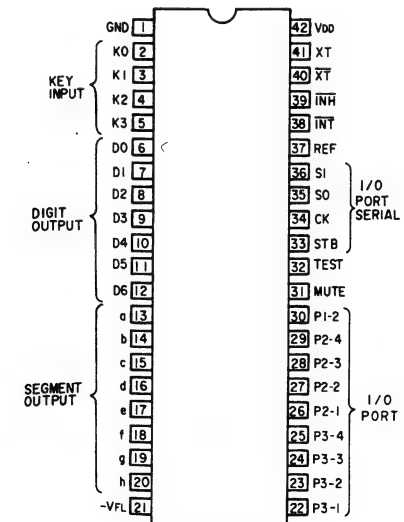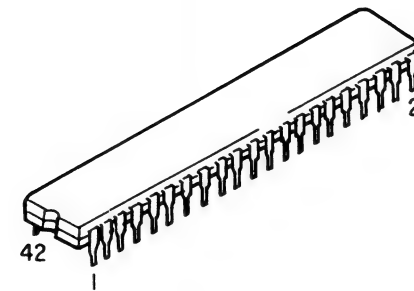


● Transistors


2SA988 (E/F)
2SC461P (C)
2SC1815 (BL)
2SC1841 (E/F)
2SC2878 (A)/(B)
2SA970 (GR)/(BL)
2SC2240 (GR)/(BL)

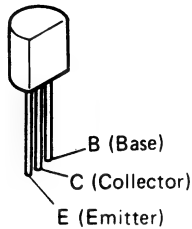


2SC1408 (GR)
2SC2458 (BL)
2SC2458 (Y/GR)

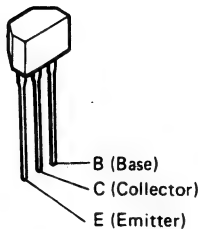


2SK365 (BL/GR)

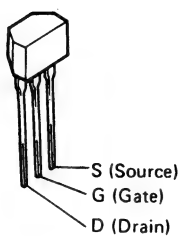


2SA1490 (O/Y)
2SC3854 (O/Y) DRA-425R only
2SA1491 (O/Y)
2SC3855 (O/Y) DRA-625R only

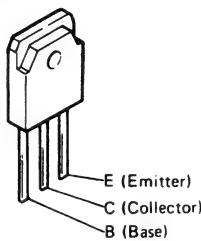


2SA1145 (O/Y)
2SB647A (C)
2SC2705 (O/Y)
2SD667A (C)

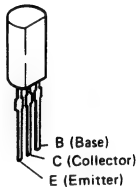


RN1204
RN2204

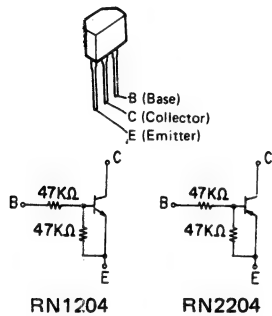

2SC3851 (Y)/(G)
2SB941A (P)/(Q)
2SD1266A (P)/(Q)

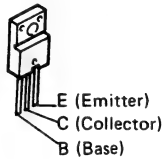


2SA1358 (O)/(Y)
2SC3421 (O)/(Y)

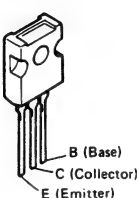


● Diodes & LED


1S2076A




1SS106



1SS104




1SS270A




DSA1A2




DSM1A2 (type-2)




HZS5C-2 HZS7B-3
HZS6C-1 HZS12A-1
HZS6C-2 HZS12A-3




SVC321D2-SP

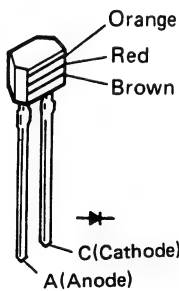


S4VB20F

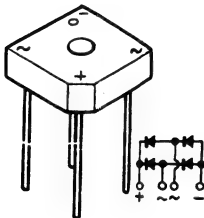


SFOR1A42
Thyristor

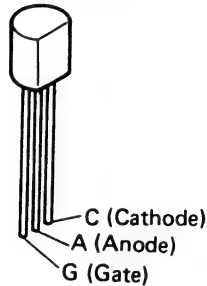



SEL1321G (Green)

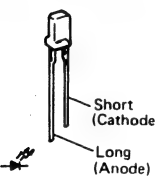

D5FB20
(DRA-625 only)

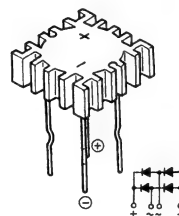

FLD (FIP10TM7)

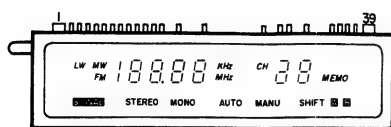

TERMINAL NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ELECTRODE	F	F	BG	P(h)	P(g)	P(f)	P(e)	P(d)	BG	P(c)	7G	P(b)	P(a)	6G	NP	5G	NP	NP	4G	NP
TERMINAL NO	21	22	23	24	25	16	27	28	29	30	31	32	33	34	35	36	37	38	39	
ELECTRODE	NP	NP	NP	NP	NP	4G	NP	P (Z)	3G	NP	2G	NP	NP	P (Z)	1G (Stere)	P (Signa)	F	F		

Notes F: Filament NP: No Pin
G: Grid
P: Anode

● Tuner Remote Control


TUNER REMOTE CONTROL

TC9173

	DATA4	DATA3	DATA2	DATA1	DATA0
1/9	0	0	0	0	1
2/10	0	0	0	1	0
3/11	0	0	0	1	1
4/12	0	0	1	0	0
5/13	0	0	1	0	1
6/14	0	0	1	1	0
7/15	0	0	1	1	1
8/16	0	1	0	0	0
SHIFT	1	1	0	0	0

VOLUME DATA

	C ₁ (27)	C ₂ (26)
VOLUME UP	LOW	HIGH
VOLUME DOWN	HIGH	LOW

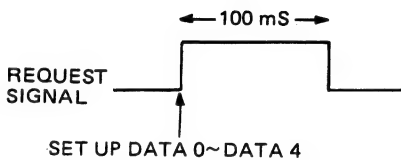


● IC601: Microcomputer for system controlling HD6305U0A63P 1-chip type 8 bit microcomputer

CH	C ₆	C ₇	DATA		C ₁₀	C ₁₁	EXPAND		C ₁₄	K	SYSTEM ADDRESS C ₁ C ₂ C ₃ C ₄ C ₅ → 0 0 1 1 0				SYSTEM ADDRESS 0 0 0 1 0				SYSTEM ADDRESS 0 0 1 0 0			
			C ₈	C ₉			C ₁₂	C ₁₃			RECEIVER DRA-625		RECEIVER DRA-425		CD PLAYER EXPAND 1 0		DECK EXPAND 1 0					
1	1	0	0	0	0	0	1	0	0		1-9		1-9									
2	0	1	0	0	0	0	1	0	0		2-10		2-10									
3	1	1	0	0	0	0	1	0	0		3-11		3-11									
4	0	0	1	0	0	0	1	0	0		4-12		4-12									
5	1	0	1	0	0	0	1	0	0		5-13		5-13									
6	0	1	1	0	0	0	1	0	0		6-14		6-14									
7	1	1	1	0	0	0	1	0	0		7-15		7-15									
8	0	0	0	1	0	0	1	0	0		8-16		8-16									
9	1	0	0	1	0	0	1	0	0		SHIFT		SHIFT									
10	0	1	0	1	0	0	1	0	0													
11	1	1	0	1	0	0	1	0	0		VOL ▼		VOL ▼									
12	0	0	1	1	0	0	1	0	0		VOL ▲		VOL ▲									
13	1	0	1	1	0	0	1	0	0													
14	0	1	1	1	0	0	1	0	0													
15	1	1	1	1	0	0	1	0	0													
16	0	0	0	0	1	0	1	0	0		POWER ON/OFF		POWER ON/OFF									
17	1	0	0	0	1	0	1	0	0													
18	0	1	0	0	1	0	1	0	0													
19	1	1	0	0	1	0	1	0	0													
20	0	0	1	0	1	0	1	0	0													
21	1	0	1	0	1	0	1	0	0													
22	0	1	1	0	1	0	1	0	0													
23	1	1	1	0	1	0	1	0	0													
24	0	0	0	1	1	0	1	0	0		PHONO		PHONO									
25	1	0	0	1	1	0	1	0	0		TUNER		TUNER									
26	0	1	0	1	1	0	1	0	0		CD		CD									
27	1	1	0	1	1	0	1	0	0		AUX/VIDEO		AUX/VIDEO									
28	0	0	1	1	1	0	1	0	0													
29	1	0	1	1	1	0	1	0	0		TAPE 1		TAPE 1									
30	0	1	1	1	1	0	1	0	0		TAPE 2		TAPE 2									
31	1	1	1	1	1	0	1	0	0													
32	0	0	0	0	0	1	1	0	0													
33	1	0	0	0	0	1	1	0	0													
34	0	1	0	0	0	1	1	0	0													
35	1	1	0	0	0	1	1	0	0													
36	0	0	1	0	0	1	1	0	0													
37	1	0	1	0	0	1	1	0	0													
38	0	1	1	0	0	1	1	0	0													
39	1	1	1	0	0	1	1	0	0													
40	0	0	0	1	0	1	1	0	0													
41	1	0	0	1	0	1	1	0	0													
42	0	1	0	1	0	1	1	0	0													
43	1	1	0	1	0	1	1	0	0													
44	0	0	1	1	0	1	1	0	0													
45	1	0	1	1	0	1	1	0	0													
46	0	1	1	1	0	1	1	0	0													
47	1	1	1	1	0	1	1	0	0													
48	0	0	0	0	1	1	1	0	0													
49	1	0	0	0	1	1	1	0	0													
50	0	1	0	0	1	1	1	0	0													
51	1	1	0	0	1	1	1	0	0													
52	0	0	1	0	1	1	1	0	0													
53	1	0	1	0	1	1	1	0	0													
54	0	1	1	0	1	1	1	0	0													
55	1	1	1	0	1	1	1	0	0													
56	0	0	0	1	1	1	1	0	0													

Terminal No.	Description	I/O	Function
1	RES	IN	RESET input terminal
2	INT	IN	Interrupt request input terminal
3	NUM	IN	Connected to 0V of power supply
4	A ₇	OUT	OUTPUT LATCH "HIGH" ACTIVE PHONO
5	A ₆	OUT	OUTPUT LATCH "HIGH" ACTIVE CD
6	A ₅	OUT	OUTPUT LATCH "HIGH" ACTIVE TUNER
7	A ₄	OUT	OUTPUT LATCH "HIGH" ACTIVE AUX-1
8	A ₃	OUT	NC
9	A ₂	OUT	OUTPUT LATCH "HIGH" ACTIVE TAPE-1
10	A ₁	OUT	OUTPUT LATCH "HIGH" ACTIVE TAPE-2
11	A ₀	OUT	NC
12	B ₀	OUT	NC
13	B ₁	IN	FUNCTION key ASSIGN input terminal
14	B ₂	IN	FUNCTION key ASSIGN input terminal
15	B ₃	IN	FUNCTION key ASSIGN input terminal
16	B ₄	OUT	FUNCTION key STROBE pulse
17	B ₅	OUT	FUNCTION key STROBE pulse
18	B ₆	OUT	FUNCTION key STROBE pulse
19	B ₇	OUT	FUNCTION key STROBE pulse
20	V _{SS}	—	Connected to 0V of power supply
21	C ₇	IN	TAPE
22	C ₆	OUT	"LOW" ACTIVE LATCH at REMOTE POWER OFF
23	C ₅	OUT	"LOW" ACTIVE LATCH at REMOTE POWER OFF (RELAY DRIVE)
24	C ₄	OUT	NC
25	C ₃	OUT	"LOW" ACTIVE LATCH at -∞ MUTING ON
26	C ₂	OUT	VOLUME DATA
27	C ₁	OUT	VOLUME DATA
28	C ₀	OUT	D ₅ TUNER REMOTE CONTROL REQUEST SIGNAL
29	D ₀	OUT	D ₄ TUNER REMOTE CONTROL DATA
30	D ₁	OUT	D ₃ TUNER REMOTE CONTROL DATA
31	D ₂	OUT	D ₂ TUNER REMOTE CONTROL DATA
32	D ₃	OUT	D ₁ TUNER REMOTE CONTROL DATA
33	D ₄	OUT	D ₀ TUNER REMOTE CONTROL DATA
34	D ₅	IN	REMOTE CONTROL DIN INPUT TERMINAL
35	D ₆ /INT 2	IN	REMOTE CONTROL
36	STBY	IN	Connected to 5V of power supply
37	TIMER	IN	Connected to 0V of power supply
38	XTAL	IN	Input terminal for built-in clock
39	EXTAL	IN	Input terminal for built-in clock
40	V _{CC}	—	Connected to 5V of power supply


PRINTED WIRING BOARD PATTERNS AND PARTS LIST
1U-1596S MAIN UNIT (DRA-625R)

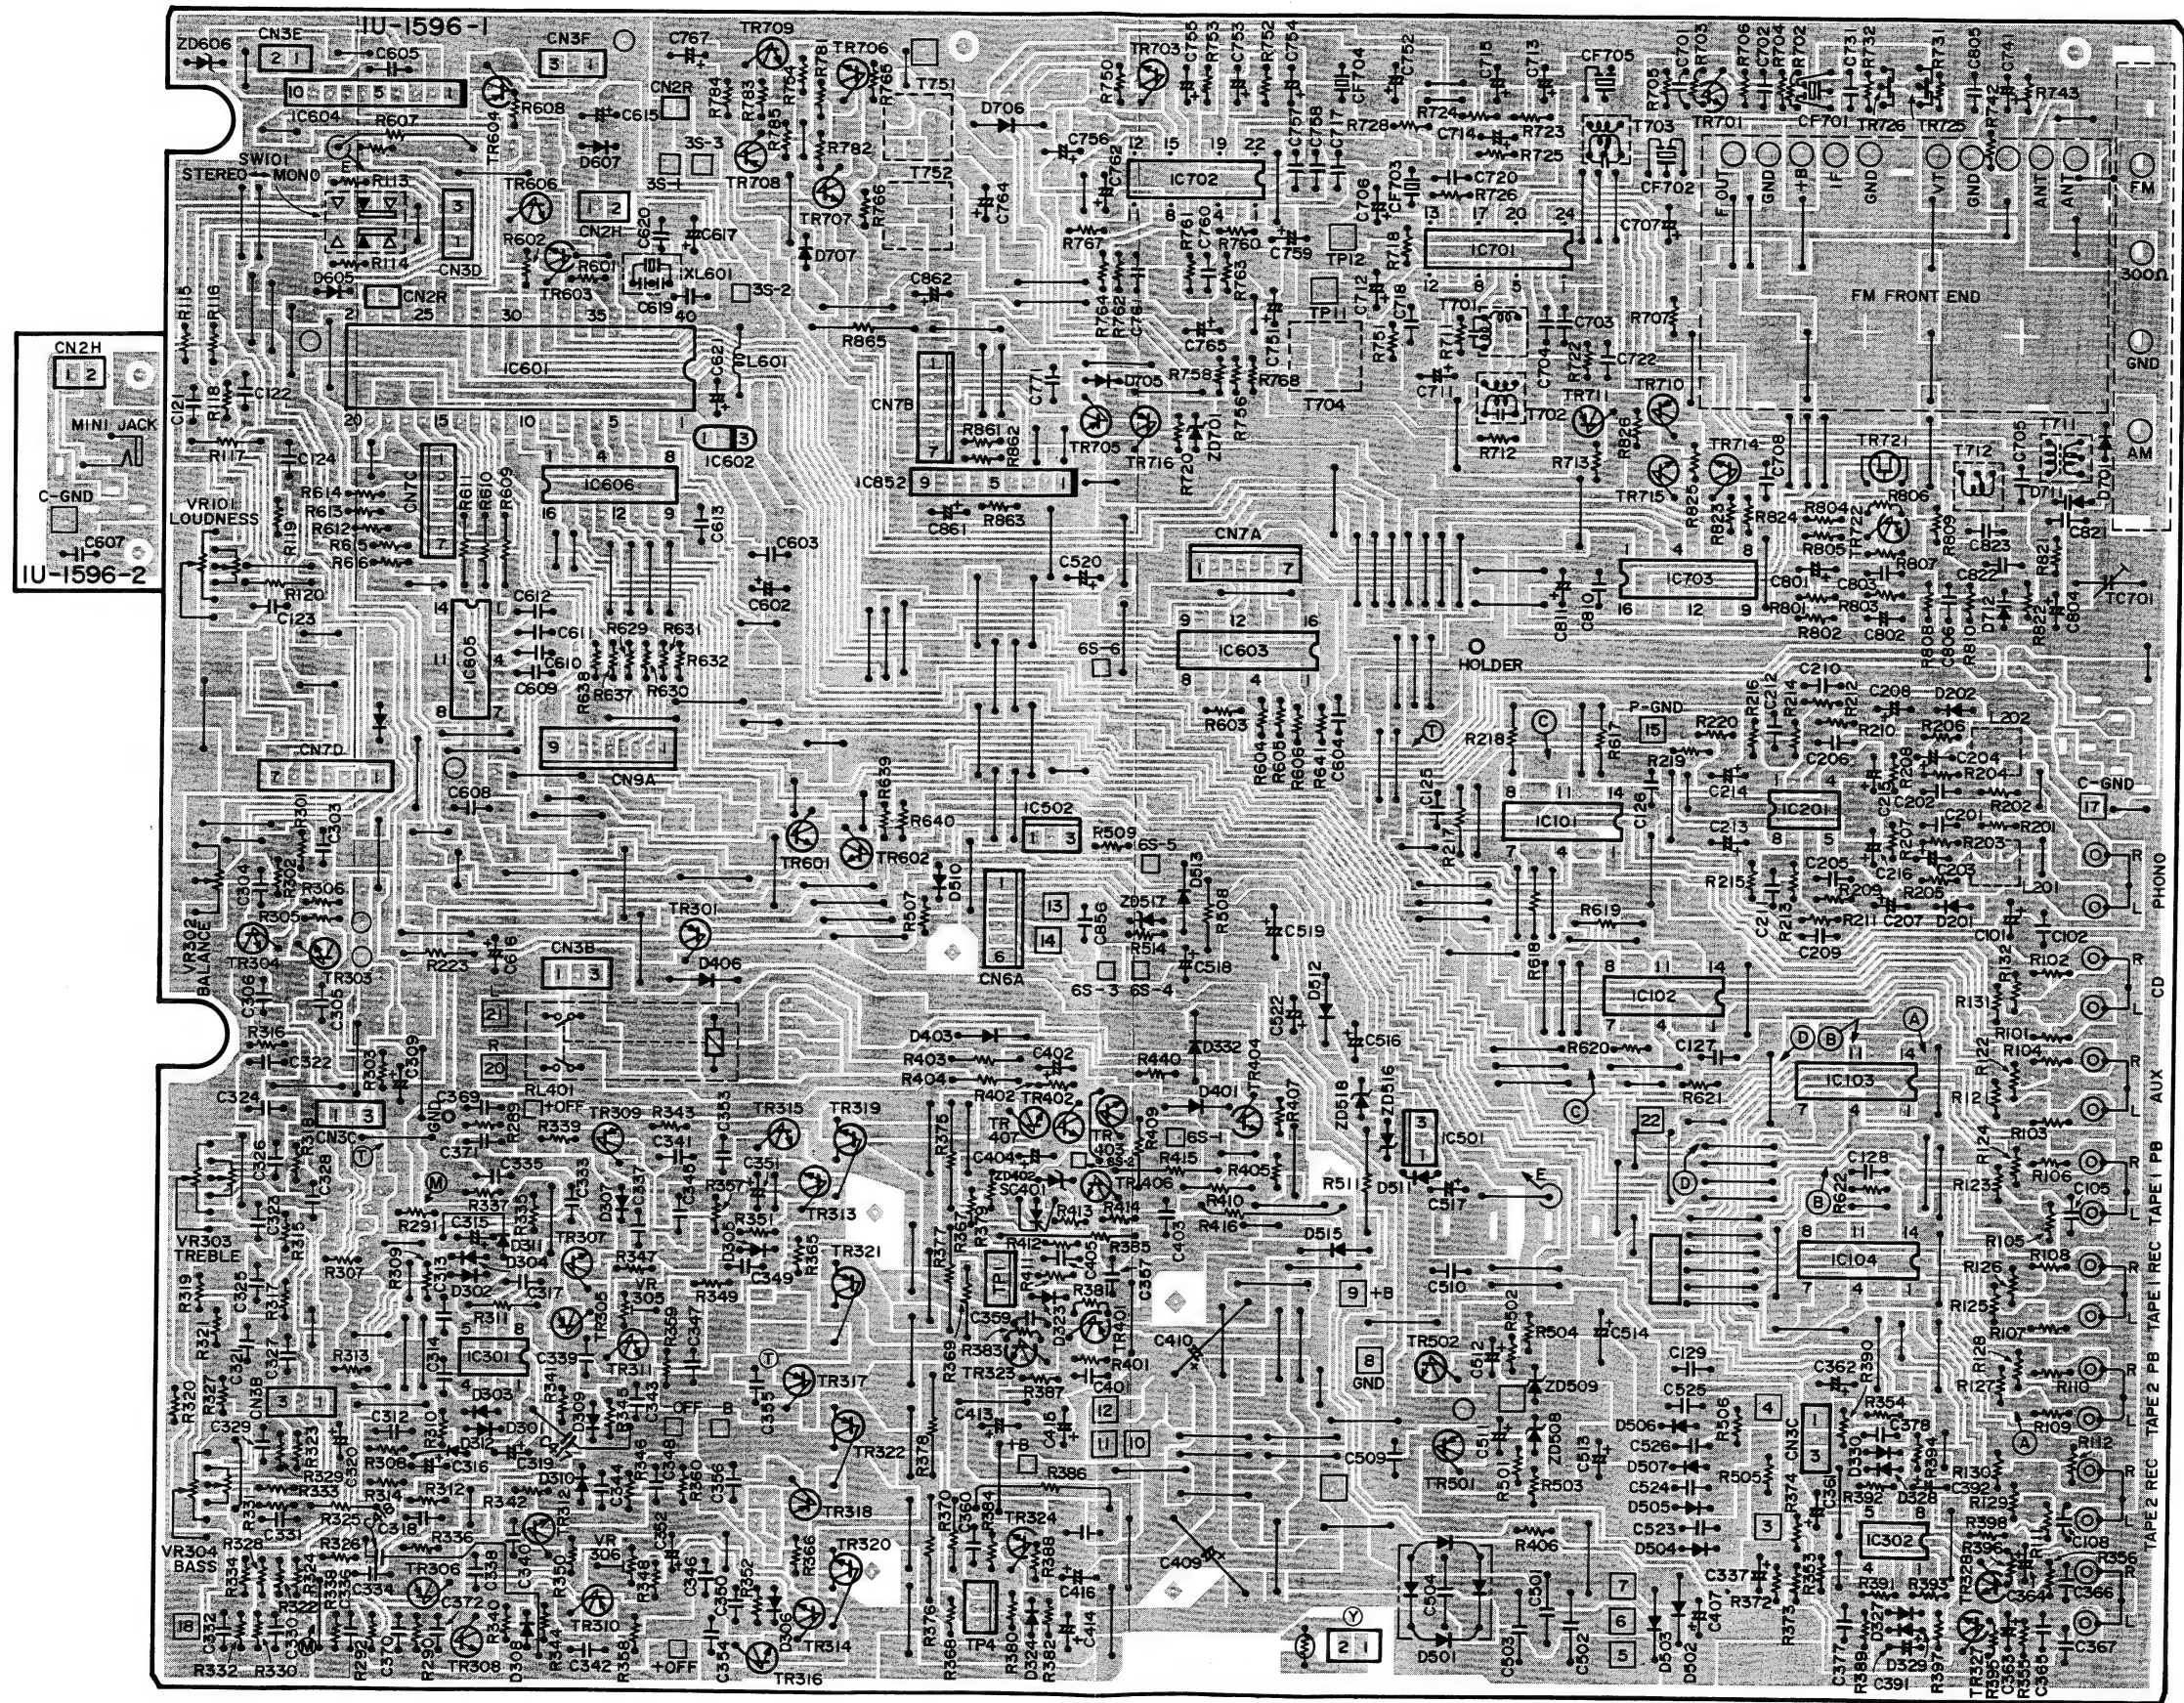


1U-1606S MAIN UNIT (DRA-425R)



1U-1597S (DRA-625R), 1U-1597S (DRA-425R) DISPLAY UNIT

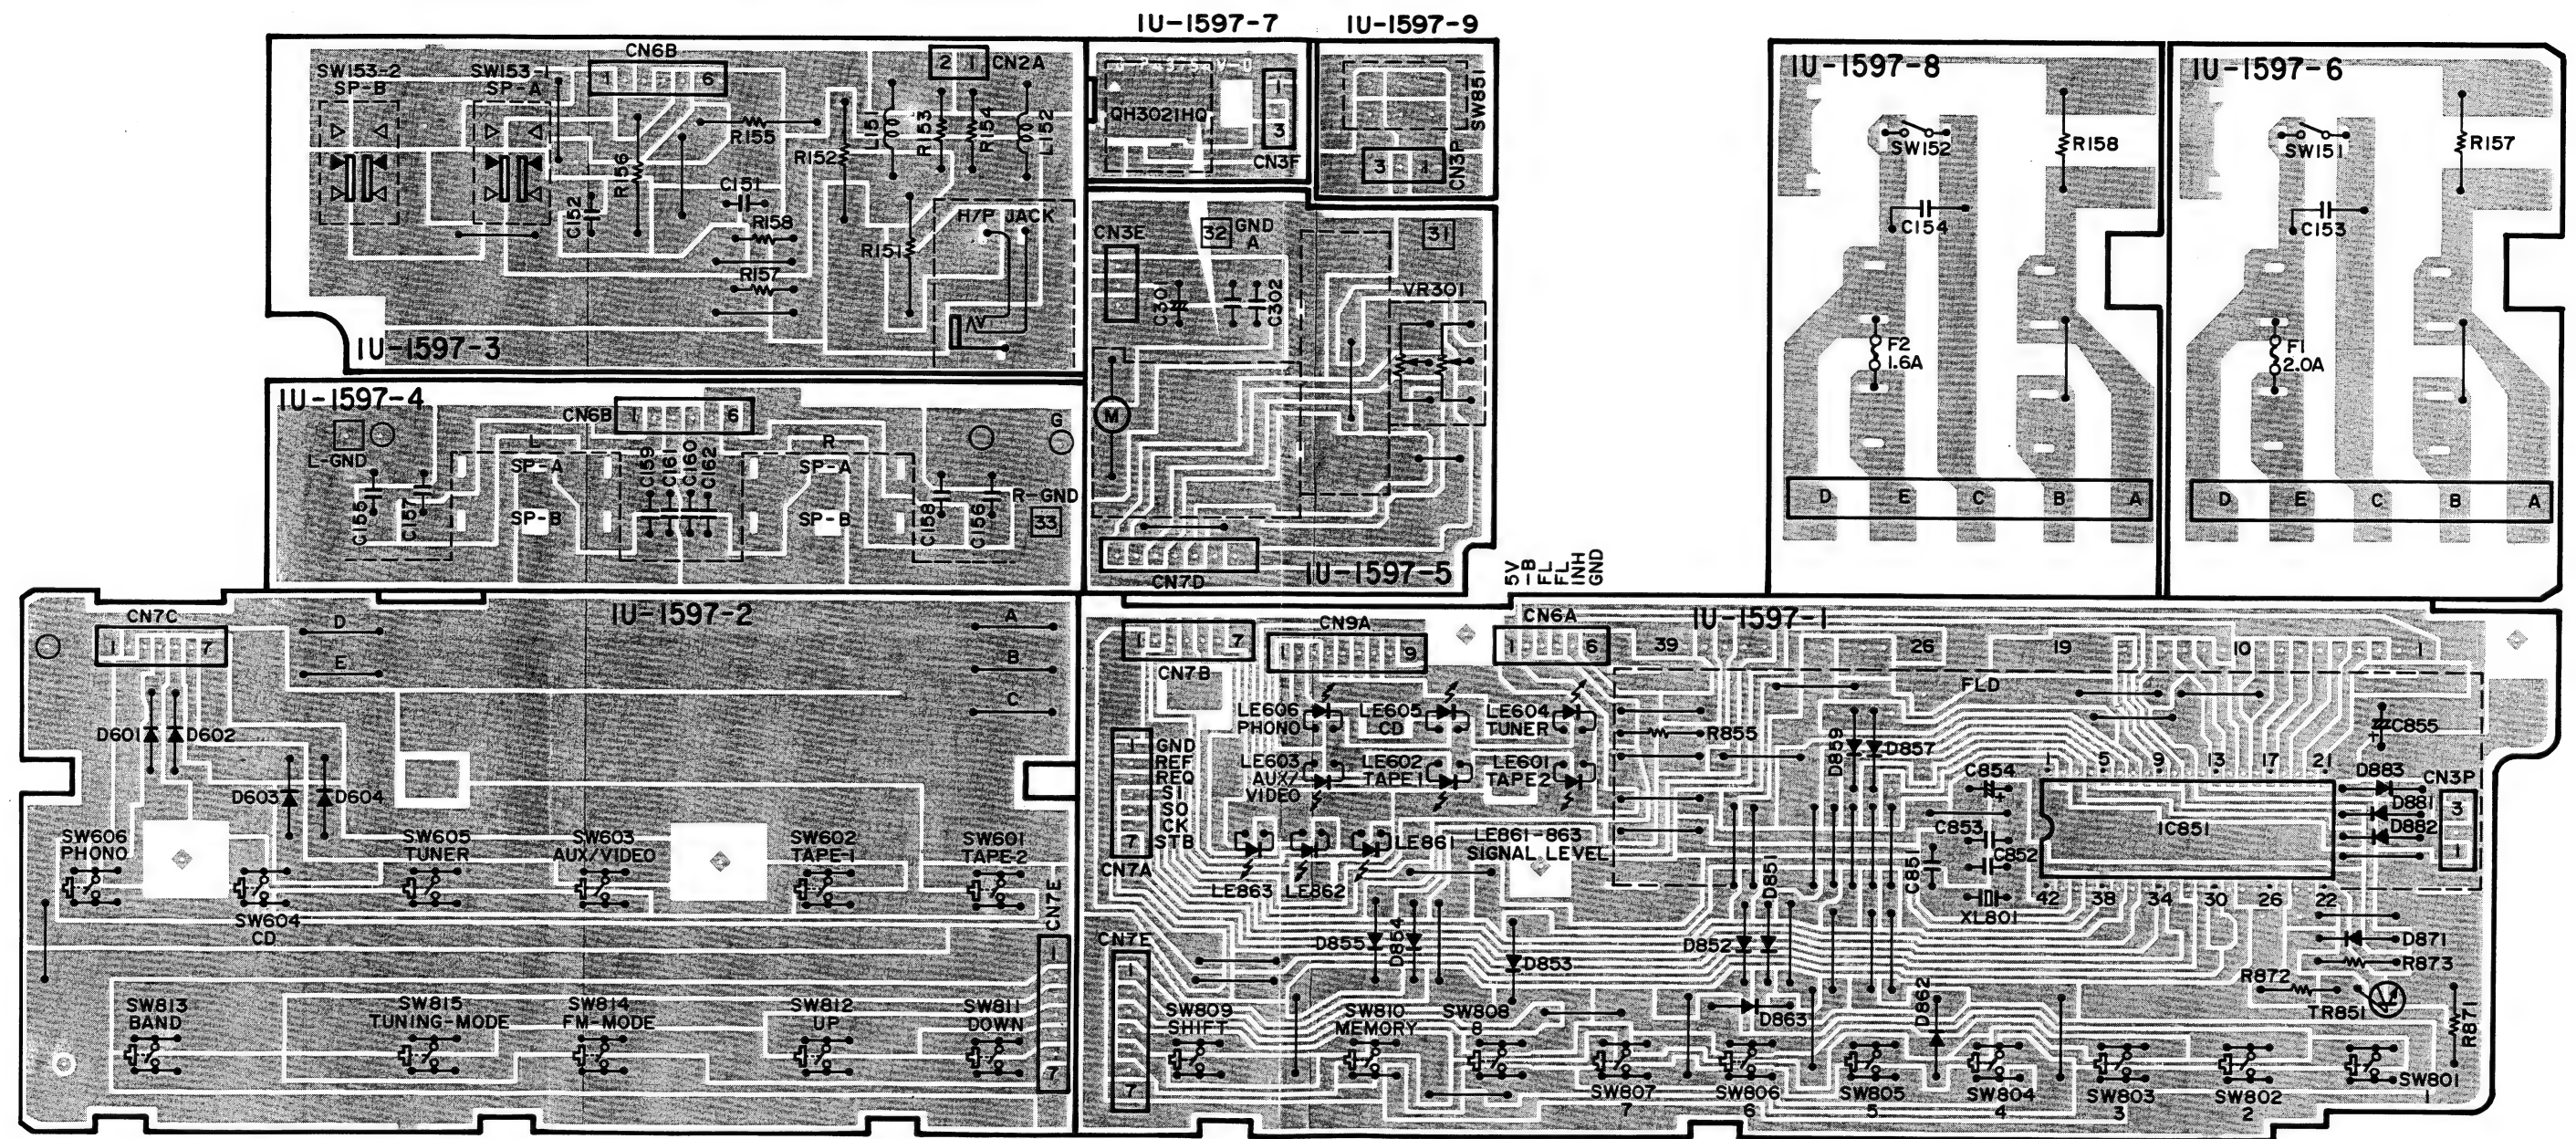

1U-1742 CONTROL UNIT (DRA-625R/425R)

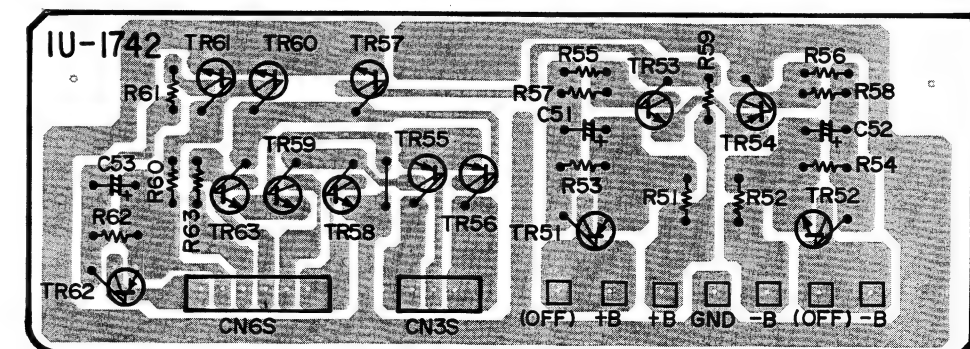

PRINTED WIRING BOARD PARTS LIST
1U-1596S MAIN UNIT (DRA-625R)
WARNING:

Parts marked with this symbol  have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC101~104	2630359006	LC4966	M DRIVE 24V
IC201	2650037007	NJM2043DD	
IC301,302	2620679000	M5238P	
IC501	2630459003	L78M05ML	
IC502	2630475003	L78M12ML	
IC601	2621103009	HD6305U0A63P	
IC602	2620678001	MN1280S	
IC603	2620975005	TC9173P	
IC604	2620977003	BA6229	
IC605	2620575007	HD14082BP	
IC606	2680070005	LB1294	
IC701	2630438008	LA1266	
IC702	2630439007	LA3401	
IC703	2621041006	TC9172AP	
IC852	2630221008	LB1403N	
TR301	2690030006	RN2204 (47k-47k)	
TR303,304	2730253015	2SC2878 (A/B)	
TR305,306	2710131021	2SA988 (E/F)	
TR307,308	2730235020	2SC1841 (E/F)	
TR309,310	2710131021	2SA988 (E/F)	
TR311,312	2730235020	2SC1841 (E/F)	
TR313,314	2730198015	2SC1815 (BL)	
TR315,316	2730323000	2SC3421 O/Y	
TR317,318	2710195009	2SA1358 O/Y	
TR319,320	2730337009	2SC3855 (O/Y)	
TR321,322	2710205009	2SA1491 (O/Y)	
TR323,324	2730281003	2SC2705 (O/Y)	
TR327,328	2730253015	2SC2878 (A/B)	
TR401	2710168007	2SA1145 (O/Y)	
TR402,403	2730198015	2SC1815 (BL)	
TR404	2730253015	2SC2878 (A/B)	
TR406	2730198015	2SC1815 (BL)	
TR407	2730235020	2SC1841 (E/F)	
TR501	2720053005	2SB647A (C)	
TR502	2730338008	2SC3851 (Y/G)	
TR601~603	2690029004	RN1204 (47k-47k)	
TR604	2690030006	RN2204 (47k-47k)	
TR606	2690029004	RN1204 (47k-47k)	
TR701	2730025023	2SC461 (C)	
TR703	2730317003	2SC2458 (BL)	
TR705	2710191003	2SA1048 (GR)	
TR706,707	2730317003	2SC2458 (BL)	
TR708	2710191003	2SA1048 (GR)	
TR709	2730317003	2SC2458 (BL)	
TR710,711	2710191003	2SA1048 (GR)	
TR714,715	2730317003	2SC2458 (BL)	
TR716	2690030006	RN2204 (47k-47k)	
TR721	2750053004	2SK365 (BL/GR)	
TR722	2730317003	2SC2458 (BL)	
TR725,726	2750051006	2SK161 (GR)	
D201,202	2760432000	1SS270A	

Ref. No.	Part No.	Part Name	Remarks
D301~312	2760432000	1SS270A	
D323,324	2760432000	1SS270A	
D327~330	2760432000	1SS270A	
D332	2760049011	1S2076A	
D401	2760049011	1S2076A	
D403	2760049011	1S2076A	
D406	2760432000	1SS270A	
D501	2760356005	D5FB20 (4001)	
D502~507	2760433009	DSM1A2 (TYPE-2)	
D510,511	2760432000	1SS270A	
D512	2760511002	1SS104TP3	
D513	2760049011	1S2076A	
D515	2760433009	DSM1A2 TYPE 2	
D605	2760432000	1SS270A	
D607	2760432000	1SS270A	
D701	2760432000	1SS270A	
D705	2760432000	1SS270A	
D706	2760049011	1S2076A	
D707	2760432000	1SS270A	
D711,712	2760302004	SVC321D2-SP	
ZD402	2760465022	HZS7B-3TD	
ZD508,509	2760473001	HZS12A-1TD	
ZD516	2760473027	HZS12A-3TD	
ZD517	2760463011	HZS6C-2TD	
ZD518	2760473027	HZS12A-3TD	
ZD606	2760463008	HZS6C-1TD	
ZD701	2760460014	HZS5C-2TD	
SC401	2790016001	SF0R1A42	
RESISTORS GROUP (not included Carbon Film ±5% ¼W type)			
AR339~342	2412379929	RD14B2E561JNBST	560Ω, ¼W, ±5%
AR343~346	2412377947	RD14B2E101JNBST	100Ω, ¼W, ±5%
AR357~360	2412379958	RD14B2E751JNBST	750Ω, ¼W, ±5%
AR365,366	2412378920	RD14B2E221JNBST	220Ω, ¼W, ±5%
AR375~378	2442013080	RS14B3AR22JNB	0.22Ω, 1W, ±5%
AR379,380	2412380950	RD14B2E202JNBST	2kΩ, ¼W, ±5%
AR385,386	2440072023	RS14B3D6R8JNB	6.8Ω, 2W, ±5%
AR415	2440049027	RS14B3A472JNB	4.7kΩ, 1W, ±5%
AR416	2440098023	RS14B3D102JNB	1kΩ, 2W, ±5%
AR505,506	2412387908	RD14B2E010JNBST	1Ω, ¼W, ±5%
AR509	2412387908	RD14B2E010JNBST	1Ω, ¼W, ±5%
AR511	2440044022	RS14B3A182JNB	1.8kΩ, 1W, ±5%
AR607	2412376906	RD14B2E270JNBST	27Ω, ¼W, ±5%
AR707	2412375981	RD14B2E220JNBST	22Ω, ¼W, ±5%
AR768	2412377947	RD14B2E101JNBST	100Ω, ¼W, ±5%
AR802	2412377947	RD14B2E101JNBST	100Ω, ¼W, ±5%

Ref. No.	Part No.	Part Name	Remarks
AR865	2440027023	RS14B3A680JNB	68 Ω , 1W, $\pm 5\%$
VR101	2110522007	V1604V20F.....K	VR BLOCK
VR305,306	2116064006	V06PB103	IDLE VR 10k Ω semi-fixed resistor
CAPACITORS GROUP			
TC701	2130022008	TRIMMER CONDENSER	
C102	2531025002	CK45F1H223Z	0.022 μ F/50V
C105	2531025002	CK45F1H223Z	0.022 μ F/50V
C108	2531025002	CK45F1H223Z	0.022 μ F/50V
C115,116	2533639001	CC45SL1H331J	330pF/50V
C119,120	2533639001	CC45SL1H331J	330pF/50V
C121,122	2533645008	CC45SL1H561J	560pF/50V
C125~129	2531025002	CK45F1H223Z	0.022 μ F/50V
C205,206	2533621006	CC45SL1H560J	56pF/50V
C271~274	2533627000	CC45SL1H101J	100pF/50V
C317,318	2533607004	CC45SL1H150J	15pF/50V
C325,326	2533633007	CC45SL1H181J	180pF/50V
C335,336	2531112902	CK45B1H102K	1000pF/50V
C337~340	2531054057	CK45B2H101K	100pF/500V
C345~348	2531112902	CK45B1H102K	1000pF/50V
C349,350	2531024003	CK45F1H103Z	0.01 μ F/50V
C353~356	2534285001	CC45SL2H470J	47pF/500V
C365,366	2533627000	CC45SL1H101J	100pF/50V
C367	2531025002	CK45F1H223Z	0.022 μ F/50V
C369,370	2531112902	CK45B1H102K	1000pF/50V
C377,378	2533627000	CC45SL1H101J	100pF/50V
C401	2531025002	CK45F1H223Z	0.022 μ F/50V
C405	2531024003	CK45F1H103Z	0.01 μ F/50V
C417,418	2531053003	CK45E2H103P	0.01 μ F/500V
C501,503	2531053003	CK45E2H103P	0.01 μ F/500V
C523~526	2531024003	CK45F1H103Z	0.01 μ F/50V
C603	2531024003	CK45F1H103Z	0.01 μ F/50V
C604	2531025002	CK45F1H223Z	0.022 μ F/50V
C605	2539031027	CK45=1E104K	0.1 μ F/25V
C607,608	2531025002	CK45F1H223Z	0.022 μ F/50V
C609~612	2533635005	CC45SL1H221J	220pF/50V
C613	2531025002	CK45F1H223Z	0.022 μ F/50V
C619,620	2533603008	CC45SL1H100D	10pF/50V $\pm 0.5pF$
C701,702	2531024003	CK45F1H103Z	0.01 μ F/50V
C703,704	2531025002	CK45F1H223Z	0.022 μ F/50V
C705	2531024003	CK45F1H103Z	0.01 μ F/50V
C708	2531024003	CK45F1H103Z	0.01 μ F/50V
C717	2539031001	CK45=1E473K	0.047 μ F/25V
C718	2533643000	CC45SL1H471J	470pF/50V
C720	2539031001	CK45=1E473K	0.047 μ F/25V
C722	2531024003	CK45F1H103Z	0.01 μ F/50V
C731	2531024003	CK45F1H103Z	0.01 μ F/50V
C757	2539031001	CK45=1E473K	0.047 μ F/25V
C758	2533639001	CC45SL1H331J	330pF/50V
C760,761	2534350004	CC45SL1H431J	430pF/50V
C771	2531024003	CK45F1H103Z	0.01 μ F/50V

Ref. No.	Part No.	Part Name	Remarks
C799	2533641002	CC45SL1H391J	390pF/50V
C803	2531025002	CK45F1H223Z	0.022 μ F/50V
C805	2531024003	CK45F1H103Z	0.01 μ F/50V
C810	2531024003	CK45F1H103Z	0.01 μ F/50V
C821	2531025002	CK45F1H223Z	0.022 μ F/50V
C822	2533607004	CC45SL1H150J	15pF/50V
C841	2531024003	CK45F1H103Z	0.01 μ F/50V
C101	2544260045	CE04W1H010M (SME)	1 μ F/50V
C203,204	2544256017	CE04W1E220M (SME)	22 μ F/25V
C207,208	2544250026	CE04W0J101M (SME)	100 μ F/6.3V
C213,214	2544256017	CE04W1E220M (SME)	22 μ F/25V
C215,216	2544260045	CE04W1H010M (SME)	1 μ F/50V
C309	2544260045	CE04W1H010M (SME)	1 μ F/50V
C315,316	2544256017	CE04W1E220M (SME)	22 μ F/25V
C319,320	2544260045	CE04W1H010M (SME)	1 μ F/50V
C351,352	2544260045	CE04W1H010M (SME)	1 μ F/50V
C361~364	2544260045	CE04W1H010M (SME)	1 μ F/50V
C374	2544260045	CE04W1H010M (SME)	1 μ F/50V
C391,392	2544260045	CE04W1H010M (SME)	1 μ F/50V
C402	2544250026	CE04W0J101M (SME)	100 μ F/6.3V
C403	2544260045	CE04W1H010M (SME)	1 μ F/50V
C404	2544256004	CE04W1E100M (SME)	10 μ F/25V
C407	2544263945	CE04W2A010M (SME)	1 μ F/100V
C409,410	2544216002	CE04W1J922M	9200 μ F/63V
C413~416	2544263945	CE04W2A010M (SME)	1 μ F/100V
C511,512	2544256046	CE04W1E101M (SME)	100 μ F/25V
C513	2544258086	CE04W1V471M (SME)	470 μ F/35V
C514	2544259001	CE04W1V222M (SME)	2200 μ F/35V
C516,517	2544260045	CE04W1H010M (SME)	1 μ F/50V
C518	2544260058	CE04W1H2R2M (SME)	2.2 μ F/50V
C520	2544254006	CE04W1C100M (SME)	10 μ F/16V

Ref. No.	Part No.	Part Name	Remarks
C522	2544258015	CE04W1V100M (SME)	10μF/35V
C602	2544254006	CE04W1C100M (SME)	10μF/16V
C615	2544254006	CE04W1C100M (SME)	10μF/16V
C616	2544256046	CE04W1E101M (SME)	100μF/25V
C617	2544250026	CE04W0J101M (SME)	100μF/6.3V
C621	2544250026	CE04W0J101M (SME)	100μF/6.3V
C706	2544254035	CE04W1C470M (SME)	47μF/16V
C707	2544254080	CE04W1C102M (SME)	1000μF/16V
C711	2544254035	CE04W1C470M (SME)	47μF/16V
C712	2544260045	CE04W1H010M (SME)	1μF/50V
C713	2544260074	CE04W1H4R7M	4.7μF/50V
C714	2544254006	CE04W1C100M (SME)	10μF/16V
C715	2544260061	CE04W1H3R3M (SME)	3.3μF/50V
C741	2544254006	CE04W1C100M (SME)	10μF/16V
C751	2544254006	CE04W1C100M (SME)	10μF/16V
C752	2544254048	CE04W1C101M (SME)	100μF/16V
C753	2544260045	CE04W1H010M (SME)	1μF/50V
C754	2544260032	CE04W1HR47M (SME)	0.47μF/50V
C755,756	2544260045	CE04W1H010M (SME)	1μF/50V
C759	2544254006	CE04W1C100M (SME)	10μF/16V
C762	2544260061	CE04W1H3R3M (SME)	3.3μF/50V
C764,765	2544260061	CE04W1H3R3M (SME)	3.3μF/50V
C767	2544260003	CE04W1H0R1M (SME)	0.1μF/50V
C801	2544254048	CE04W1C101M (SME)	100μF/16V
C802	2543056014	CE04D1H010MBP (SME)	1μF/50V
C804	2544260045	CE04W1H010M (SME)	1μF/50V
C806	2544260061	CE04W1H3R3M (SME)	3.3μF/50V
C811	2544250026	CE04W0J101M (SME)	100μF/6.3V

Ref. No.	Part No.	Part Name	Remarks
C861	2544254006	CE04W1C100M (SME)	10μF/16V
C862	2544254048	CE04W1C101M (SME)	100μF/16V
C123,124	2554199960	CQ92M1H223J (MRZ)	0.022μF/50V
C201,202	2533635005	CC45SL1H221J	220pF/50V
C209,210	2554199999	CQ92M1H243J (MRZ)	0.024μF/50V
C211,212	2554213956	CQ93M1H682J (B)	6800pF/50V
C313,314	2554200008	CQ93P1H101J	100pF/50V
C323,324	2551120013	CQ93M1H122J	1200pF/50V
C327,328	2551121009	CQ93M1H682J	6800pF/50V
C331,332	2551121041	CQ93M1H153J	0.015μF/50V
C333,334	2551212905	CQ93M1H103J	0.01μF/50V
C341~344	2554199960	CQ92M1H223J (MRZ)	0.022μF/50V
C371,372	2551212905	CQ93M1H103J	0.01μF/50V
C823	2554135005	CQ93P1H391J	390pF/50V
C303~306	2561035075	CF93A1H684J	0.68μF/50V
C321,322	2561034047	CF93A1H563J	0.056μF/50V
C329,330	2561034089	CF93A1H124J	0.12μF/50V
C357,358	2561034076	CF93A1H104J	0.1μF/50V
C359,360	2561034005	CF93A1H273J	0.027μF/50V
C502	2561042000	CF93A2E104K	0.1μF/250V
C509,510	2561035075	CF93A1H684J	0.68μF/50V
C856	2561034076	CF93A1H104J	0.1μF/50V
C519	2590004006	SB CAP=223=	
TRANS COIL, FILTERS, RELAY, SWITCH GROUP			
L201,202	2359003002	FTZ CHOKE COIL	
L601	2350016988	INDUCTOR	120μH
RL401	2149003005	RELAY	
T701	2312065003	FM IF DET TRANS(P)	
T702	2312066002	FM IF DET TRANS(S)	
T703	2310056001	AM IFT	
T711	2311127007	MW ANT TRANS	
T712	2311130007	MW OSC COIL	
T751,752	2320085004	LPF	
SW101	2129520003	1P PUSH SWITCH	MODE
CF701,702	2610064007	SFT10.7MS2	
CF703	2610031001	BFU450C4 (C,F)	
CF704	2610079005	CSB456F11	
CF705	2610034008	SFP450H	
XL601	3990034002	CST4.00MG	4MHz
T704	2320121007	ANTI. BIRDIE FILTER	

Ref. No.	Part No.	Part Name	Q'ty	Remarks
OTHER PARTS GROUP				
	4179021107	RADIATOR BLOCK	1	
	4738007009	3x12 CUP SCREW	4	
	4737500044	TAPPING SCREW(P) 3x8 (BLACK)	2	
	2048260004	MINI JACK	1*	3.5mm
	2050346000	4P CONNECTOR BASE	1	
	2050347009	6P CONNECTOR BASE	2	
	2050433007	3P ANT TERMINAL (DIN)	1	
	2160065006	FRONT END	1	
	2050185038	3P WIRE HOLDER	6	
	2050185025	2P WIRE HOLDER	1	
	2050343061	6P CONN. BASE (KR-PH)	1	CN6A
	2050343074	7P CONN. BASE (KR-PH)	3	CN7A,B,C.
	2050343090	9P CONN. BASE (KR-PH)	1	CN-9A
	2050190036	3P NH CONNECTOR BASE	2	
	2050233032	3P EH CONNECTOR BASE	1	CN-3F
	2030322060	1P CONTACT Ass'y	1	

1U-1606S MAIN UNIT PARTS LIST (DRA-425R)
[Same as 1U-1596S (for DRA-625R) except the followings]


NOTE: A: ADD, C: CHANGE, D: DELETE			
Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC302	2620679000	M5238P	D
TR315,316	2740060007	2SD667A (C)	C
TR317,318	2720053005	2SB647A (C)	C
TR319,320	2730336000	2SC3854 (O/Y)	C
TR321,322	2710204000	2SA1490 (O/Y)	C
TR323,324	2730235020	2SC1841 (E/F)	C
TR327,328	2730253015	2SC2878 (A/B)	D
TR401	2710131021	2SA988 (E/F)	C
D327~330	2760432000	1SS270A	D
D332	2760432000	1SS270A	D
D501	2760338007	S4VB20F	C
CAPACITORS GROUP			
C271,272	2533627000	CC45SL1H101J	100pF/50V D
C365,366	2533627000	CC45SL1H101J	100pF/50V D
C377,378	2533627000	CC45SL1H101J	100pF/50V D
C361~364	2544260045	CE04W1H010M (SME)	1μF/50V D
C374	2544260045	CE04W1H010M (SME)	1μF/50V D
C391,392	2544260045	CE04W1H010M (SME)	1μF/50V D
C409,410	2546089004	CE04W==822M	8200μF/56V C
TRANS, COIL, FILTERS RELAY, SWITCH			
SW101	2129520003	1P PUSH SWITCH	MODE D
OTHER PARTS GROUP			Q'ty
	2050346000	4P CONNECTOR BASE	2 C
	2050347009	6P CONNECTOR BASE	1 C
	2050185038	3P WIRE HOLDER	4 C

**1U-1597S (DRA-625R), 1U-1597S (DRA-425R)
DISPLAY UNIT PARTS LIST**

NOTE: ■ DRA-625R only ● DRA-425R only

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC851	2620998008	TC9303AN013	
TR851	2730322001	2SC2458 (Y/GR)	
D601~604	2760370007	1SS106TD	
D851~855	2760049011	1S2076A	
D857	2760049011	1S2076A	
D859	2760049011	1S2076A	
D862,863	2760049011	1S2076A	
D871	2760049011	1S2076A	
LE601~606	3939261027	LED SEL1321G (D2/3)	
LE861~863	3939261027	LED SEL1321G (D2/3)	
RESISTORS GROUP (not included Carbon Film ±5% ¼W type)			
Δ R151,152	2440033020	RS14B3A221JNBF	220Ω, 1W
R153,154	2412036000	RD14B2E4R7J	4.7Ω, ¼W
Δ R155,156	2440015022	RS14B3A6R8JNBF	6.8Ω, 1W
R855	2412132001	RD14B2E473J	47kΩ, ¼W
R871~873	2412116001	RD14B2E103J	10kΩ, ¼W
R896~899	2412116001	RD14B2E103J	10kΩ, ¼W
VR301	2110521011	V1620V30FB104R	MOTOR DRIVE VR
CAPACITORS GROUP			
C151,152	2561034937	CF93A1H473J	0.047μF/50V
Δ C153	2538014003	CK45F2GAC103M	0.01μF/400V AC
Δ C154	2538014003	CK45F2GAC103M	0.01μF/400V AC
C155~158	2551121025	CQ93M1H103J	0.01μF/50V
C159	2531024003	CK45F1H103Z	0.01μF/50V
C162	2531024003	CK45F1H103Z	0.01μF/50V
C301	2543056014	CE04D1H010MBP (SME)	1μF/50V
C302	2539031027	CK45=1E104K	0.1μF/25V
C851,852	2533603008	CC45SL1H100D	10pF/50V
C853	2531024003	CK45F1H103Z	0.01μF/50V
C854	2544250026	CE04W0J101M (SME)	100μF/6.3V
C855	2544258057	CE04W1V101M (SME)	100μF/35V
SWITCHES, COILS GROUP			
L151,152	2359001004	INDUCTOR	
Δ SW151	2124686007	POWER SW TV-5	
Δ SW152	2124686007	POWER SW TV-5	
SW153	2129532004	2P PUSH SW	SP SW
SW601~606	2124407901	TACT SWITCH (IM)	
SW801~815	2124407901	TACT SWITCH (IM)	

WARNING:

Parts marked with this symbol  have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

Ref. No.	Part No.	Part Name	Remarks
OTHER PARTS GROUP			
Δ F001	2020022008	FUSE HOLDER	
Δ F002	2061015061	FUSE 2A	
	2061015058	FUSE 1.6A	
XL801	2050149032	5P WRAPPING TERMINAL	
	2048167026	HEADPHONES JACK	(Europe)
	2050484001	8P SP TERMINAL	(Australia, U.K.)
	2050472013	8P SP TERMINAL	REMOCON
	4990088002	QH3031H0	
	1460921100	LED HOLDER	
	3990040009	X'TAL (7.2MHz)	
	3934043004	FLD (FIP10TM7)	
	4122268302	FLD BRACKET	
	2050185025	2P WIRE HOLDER	CN-2A
	2050185067	6P WIRE HOLDER	CN-6BB
	2050185070	7P WIRE HOLDER	CN-7EE
	2050233032	3P EH CONNECTOR BASE	CN-3E
	2050233074	7P EH CONNECTOR BASE	CN-7D
	4150299000	CONDENSER COVER	
	■5131390008	FUSE LABEL	
	●5131390011	FUSE LABEL	

**1U-1742 CONTROL UNIT PARTS LIST
(DRA-625R/425R)**

Ref. No.	Parts No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
TR051	2720085002	2SB941A(Q)/(P)	
TR052	2740121001	2SD1266A(Q)/(P)	
TR053	2730187039	2SC2240(BL/GR)	
TR054	2710094032	2SA970(BL/GR)	
TR055,056	2690030006	RN2204(47k-47k)	
TR057~060	2690029004	RN1204(47k-47k)	
TR061	2730198015	2SC1815(BL)	
TR062	2720053005	2SB647A(C)	
TR063	2690029004	RN1204(47k-47k)	
RESISTORS GROUP (not included Carbon Film ±5% ¼W type)			
Δ R051,052	2412387908	RD14B2E010JNBST	1ohm, ¼W ±5%
R053,054	2412402058	RD14B2E473J(5)	47kohm, ¼W ±5%
R055~058	2412401062	RD14B2E203J(5)	20kohm, ¼W ±5%
R059	2412402058	RD14B2E473J(5)	47kohm, ¼W ±5%
R060	2412401017	RD14B2E123J(5)	12kohm, ¼W ±5%
R061	2412399035	RD14B2E222J(5)	2.2kohm, ¼W ±5%
R062	2412402058	RD14B2E473J(5)	47kohm, ¼W ±5%
R063	2412398052	RD14B2E102J(5)	1kohm, ¼W ±5%
CAPACITORS GROUP			
C051,052	2544261028	CE04W1H101M (SME)	100μF/50V
C053	2544258057	CE04W1V101M (SME)	100μF/35V
OTHER PARTS GROUP			
	2050233032	3P EH CONNECTOR BASE	Q'ty 1
	2050233061	6P EH CONNECTOR BASE	Q'ty 1

EXPLODED VIEW OF CHASSIS AND CABINET & PARTS LIST
PARTS LIST OF EXPLODED VIEW
(DRA-625R/425R Europe Black Version)

NOTE: ■ DRA-625R only ● DRA-425R only

Ref. No.	Part No.	Part Name	Q'ty	Remarks
⊙ 1	4110751203	MAIN CHASSIS	1	
2	4122462108	BRACKET-A	1	
3	1040173103	FOOT Ass'y	4	
4	4140478006	SAFETY PLATE	1	
5	1050758107	BOTTOM COVER	1	
6	4430518003	P.C.B. HOLDER	2	
7	4122197017	CARD STAND	1	
⊙ 8■	1U-1596S	MAIN UNIT	1	
⊙ 8●	1U-1606S	MAIN UNIT	1	
⊙ 9■	1U-1597SZ	DISPLAY UNIT	1	
⊙ 9●	1U-1597S	DISPLAY UNIT	1	
10■	4122528000	BRACKET C	1	
11■	4140426045	SAFETY PLATE	1	
12	4610386013	SPACER RUBBER	1	
13■	4140477007	SHIELD PLATE	1	
14■	4140426029	SAFETY PLATE	1	
15	4140483004	SAFETY PLATE	1	
16	5131144005	MASKING SHEET	1	
17	4122548006	BRACKET	1	
⊙ 18	1U-1742	CONTROL UNIT	1	
19	4150299000	CONDENSER COVER	1	
20	1430568001	FILTER	1	
21■	1050809124	BACK PANEL	1	
21●	1050809137	BACK PANEL	1	
▲ 22	2538014003	CK45F2GAC103M	1	C-151
				0.01μF/ 400V AC
23	—	—	—	
▲ 24	2062063009	AC CORD WITH PLUG	1	
▲ 25	4450056008	CORD BUSH	1	
▲ 26	2050071016	TERMINAL Ass'y	1	
27	4770018001	WASHER (P-87)	1	
28	1460925009	ANT. HOLDER	1	
▲ 29■	2335667103	POWER TRANS	1	
▲ 29●	2335666104	POWER TRANS	1	
30■	4170322216	H.P RADIATOR	1	
30●	4170322203	H.P RADIATOR	1	
⊙ 31	4129082002	RADIATOR BRACKET	1	
32	—	—	—	
33	4458004007	WIRE CLAMPER	14	
34	4122463000	BRACKET-B	1	
35	2030322060	1P CONNECTOR	1	
36	4122431003	BRACKET	1	
37	1460922400	INNER PANEL	1	
38	1131018106	KNOB-TACT-1	1	
39	1131019105	KNOB-TACT-2	1	
40	1131020204	KNOB-FUNCTION	1	
41	1430541109	WINDOW	1	
42	4770288006	PUSH RIVET	4	
⊙ 43	4140453102	SHIELD PLATE	1	
44	1131054102	POWER KNOB Ass'y	1	
45	—	—	—	

WARNING:

Parts marked with this symbol ▲ have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

Ref. No.	Part No.	Part Name	Q'ty	Remarks
46	1441805009	FRONT PANEL Ass'y	1	
46	1441807007	FRONT PANEL Ass'y	1	
47	—	—	—	
48	1139071006	PUSH KNOB (T)	3	
48	1139071006	PUSH KNOB (T)	2	
49	1120529101	VOLUME KNOB	1	
50	1120530103	KNOB	3	Tone, Balance Loudness
51	1120530116	KNOB	1	
52	1020314005	TOP COVER	1	
53	1220146002	HIMERON SHEET	2	100x11x 0.5t UL Himeron
54	—	—	—	
55	4610390070	RUBBER SHEET	2	
56	2048167026	HEADPHONES JACK	1	M12 Nut
57	2129532004	2P PUSH SWITCH	1	Speaker Select
58	2110521011	V1620V30FB104R	1	Motor Drive 100 kohm VR
59	2124686007	POWER SWITCH	1	TV-5
60	2110522007	V1604V20F ... K (VR BLOCK)	1	Bass, Treble, Balance, Variable Loudness
61■	2544216002	CE04W1J922M	2	C409,410 9200μF/ 63V
61●	2546089004	CE04W==822M	2	8200μF/ 63V C409,410
62	2050347009	6P CONNECTOR BASE	2	Phono, CD, Aux/ Video Tape-2 (PB, REC)
63	2050346000	4P CONNECTOR BASE	1	Pre-Out Input Terminal Tape-1 (PB, REC)
64	2050433007	3P ANT. TERMINAL (DIN)	1	
65	2048260004	3.5M MINI JACK	1	Remote Control
66	2050484001	8P SPEAKER TERMINAL	1	
67	4179021107	RADIATOR BLOCK	1	
68■	2710205009	2SA1491(O)/(Y)	2	Power TR. TR321, 322,

PARTS LIST OF EXPLODED VIEW
(DRA-625R/425R Europe Gold Version)

[Same as parts list (for DRA-625R/425R Europe Black Version)
except the followings]

Ref. No.	Part No.	Part Name	Remarks
37	1460922413	INNER PANEL	
38	1131018119	KNOB-TACT-1	
39	1131019118	KNOB-TACT-2	
40	1131020217	KNOB-FUNCTION	
44	1131054115	POWER KNOB-Ass'y	
46■	1441805012	FRONT PANEL Ass'y	
46●	1441807010	FRONT PANEL Ass'y	
48	1139071019	PUSH KNOB (T)	
49	1120529114	VOLUME KNOB	
50	1120530129	KNOB	
51	1120530132	KNOB	
52	1020314018	TOP COVER	
SCREW			
110	4770263018	3P SWELLING SCREW	
PACKING & ACCESSORIES (not included Exploded view)			
211■	5011312012	CARTON CASE	
211●	5011313011	CARTON CASE	
215	5139111001	COLOR LABEL (GOLD)	

NOTE : ■ DRA-625R only
● DRA-425R only

ADDENDUM LIST

Ref. No.	Part Name & Descriptions	DRA-425R
		U.K.
⊙ 9	DISPLAY UNIT	1U-1597U
16	MASKING SHEET	5131144005(3)
24	AC CORD	
29	AC CORD WITH LABEL	2062024006
	POWER TRANS(EA)	2335680009
	VOLTAGE LABEL	5130362008(2)


● NOTE FOR PARTS LIST

- Part indicated with the mark "⊙" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

Ref. No.	Part No.	Part Name	Q'ty	Remarks
68●	2710204000	2SA1490(O)/(Y)	—	Power TR TR321, 322
69■	2730337009	2SC3855(O)/(Y)	2	Power TR TR319, 320
69●	2730336000	2SC3854(O)/(Y)	—	Power TR. TR319, 320
70■	2129520003	1P PUSH SWITCH	1	Mode
71	2149003005	RELAY	—	RL401
72	2160065006	FRONT END	—	
73	4990088002	QH3031H0	—	Remote Sensor
74	3934043004	FLD (FIP 10TM7)	—	
75■	2061015061	FUSE (2A)	—	F-001
75●	2061015058	FUSE (1.6A)	—	F-002
76	4122528000	BRACKET C	1	
SCREWS & NUTS				
101■	4737002034	TAPPING SCREW(S) (BLACK) 3x6	35	
101●	4737002034	TAPPING SCREW(S) (BLACK) 3x6	34	
102	4737002021	TAPPING SCREW(S) (BLACK) 3x8	5	
103	4737004016	TAPPING SCREW(S) (BLACK) 4x6	4	
104	4737500044	TAPPING SCREW(P) (BLACK) 3x8	2	
105	4737508017	TAPPING SCREW(P) (BLACK) (3x10)	7	
106	4737015018	TAPPING SCREW(S) (BLACK) 3x8	11	
110	4770263005	3P SWELLING SCREW	4	
111	4770064107	FIXING SCREW	4	
PACKING & ACCESSORIES (not included EXPLODED VIEW)				
201	5058006019	ENVELOPE	1	
202	5111762009	INST. MANUAL	1	
203	—	—	1	
204	2311129005	LOOP ANTENNA	1	
205	5290040008	FM ANT ADAPTOR	1	
206	4990120009	RC-111	1	
207	5050149000	POLY-COVER	1	
208	5059102006	POLY COVER	1	
209	5049102003	STYLEN PAPER	2	
210	5030674003	CUSHION	2	
211■	5011312009	CARTON CASE	1	
211●	5011313008	CARTON CASE	1	
212	5020658013	PAD	1	
213	5131389006	CONTROL CARD BASE	1	
214	5131349004	THERMAL CARBON FILM	1	


EXPLODED VIEW OF CHASSIS AND CABINET (DRA-625R/425R)


WARNING:
 Parts marked with this symbol  have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

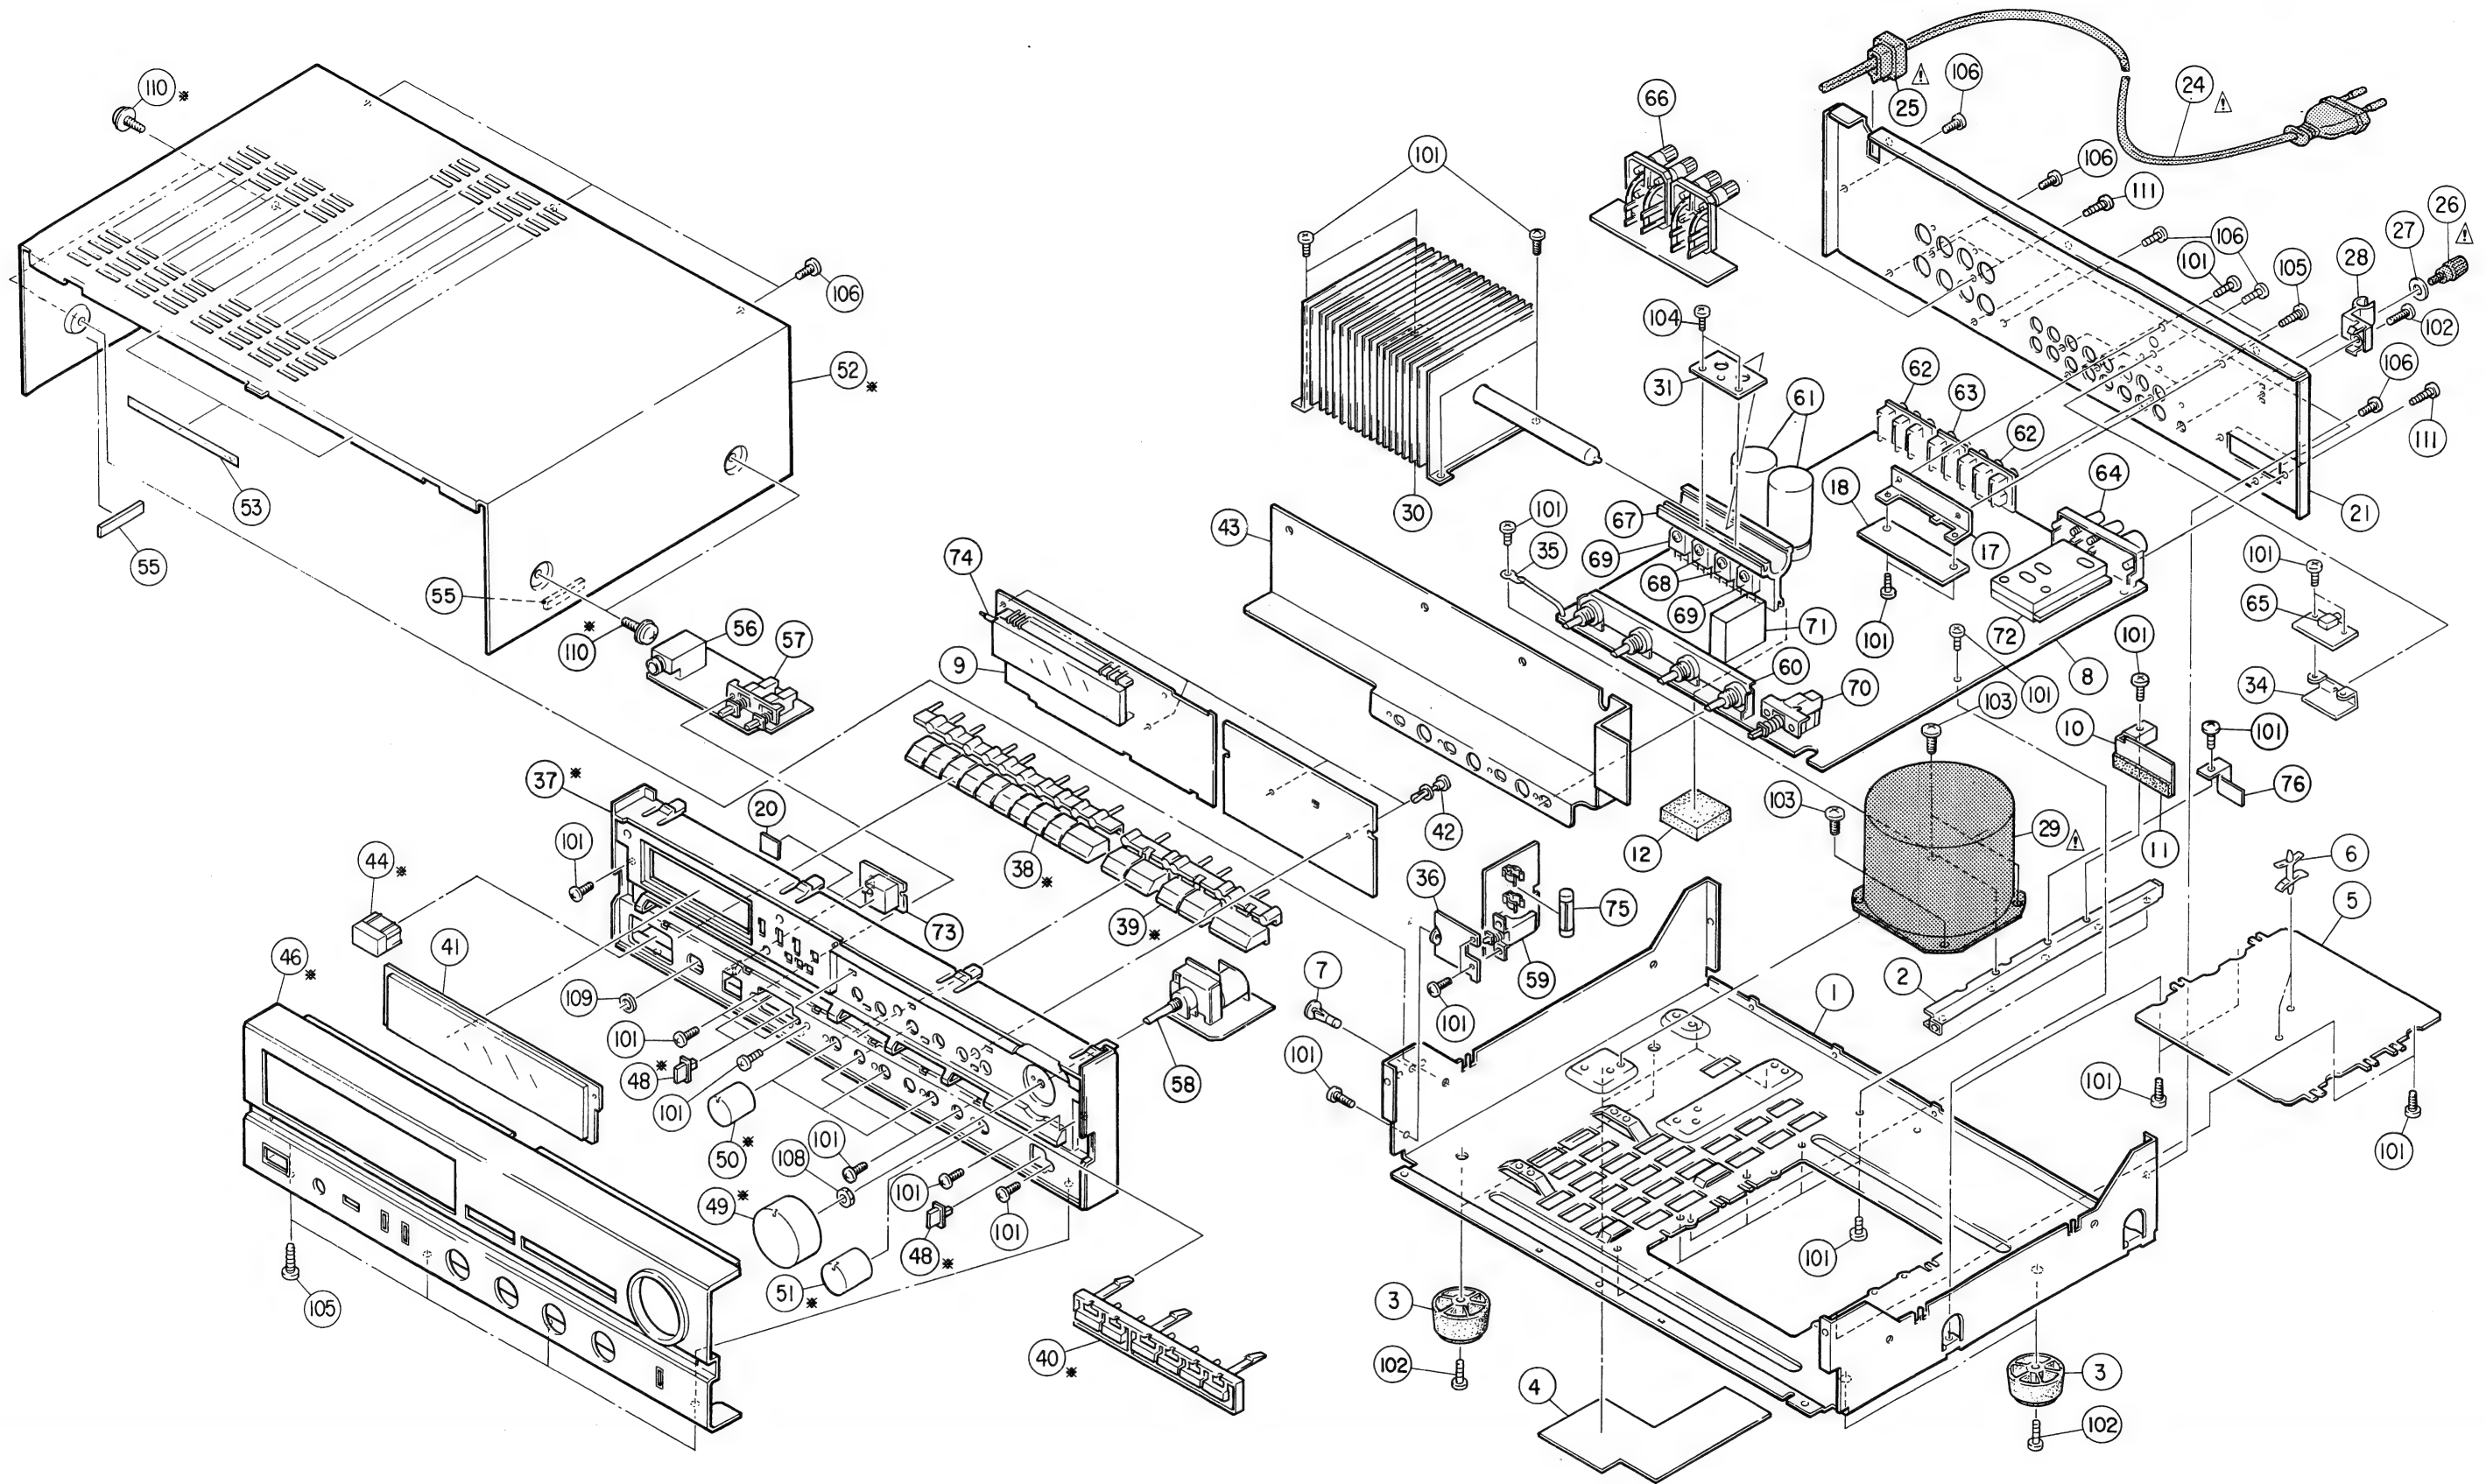


(Those parts marked ※ in the Black Version should be changed the part number in the Gold Version.)


WIRING DIAGRAM (DRA-625R/425R)

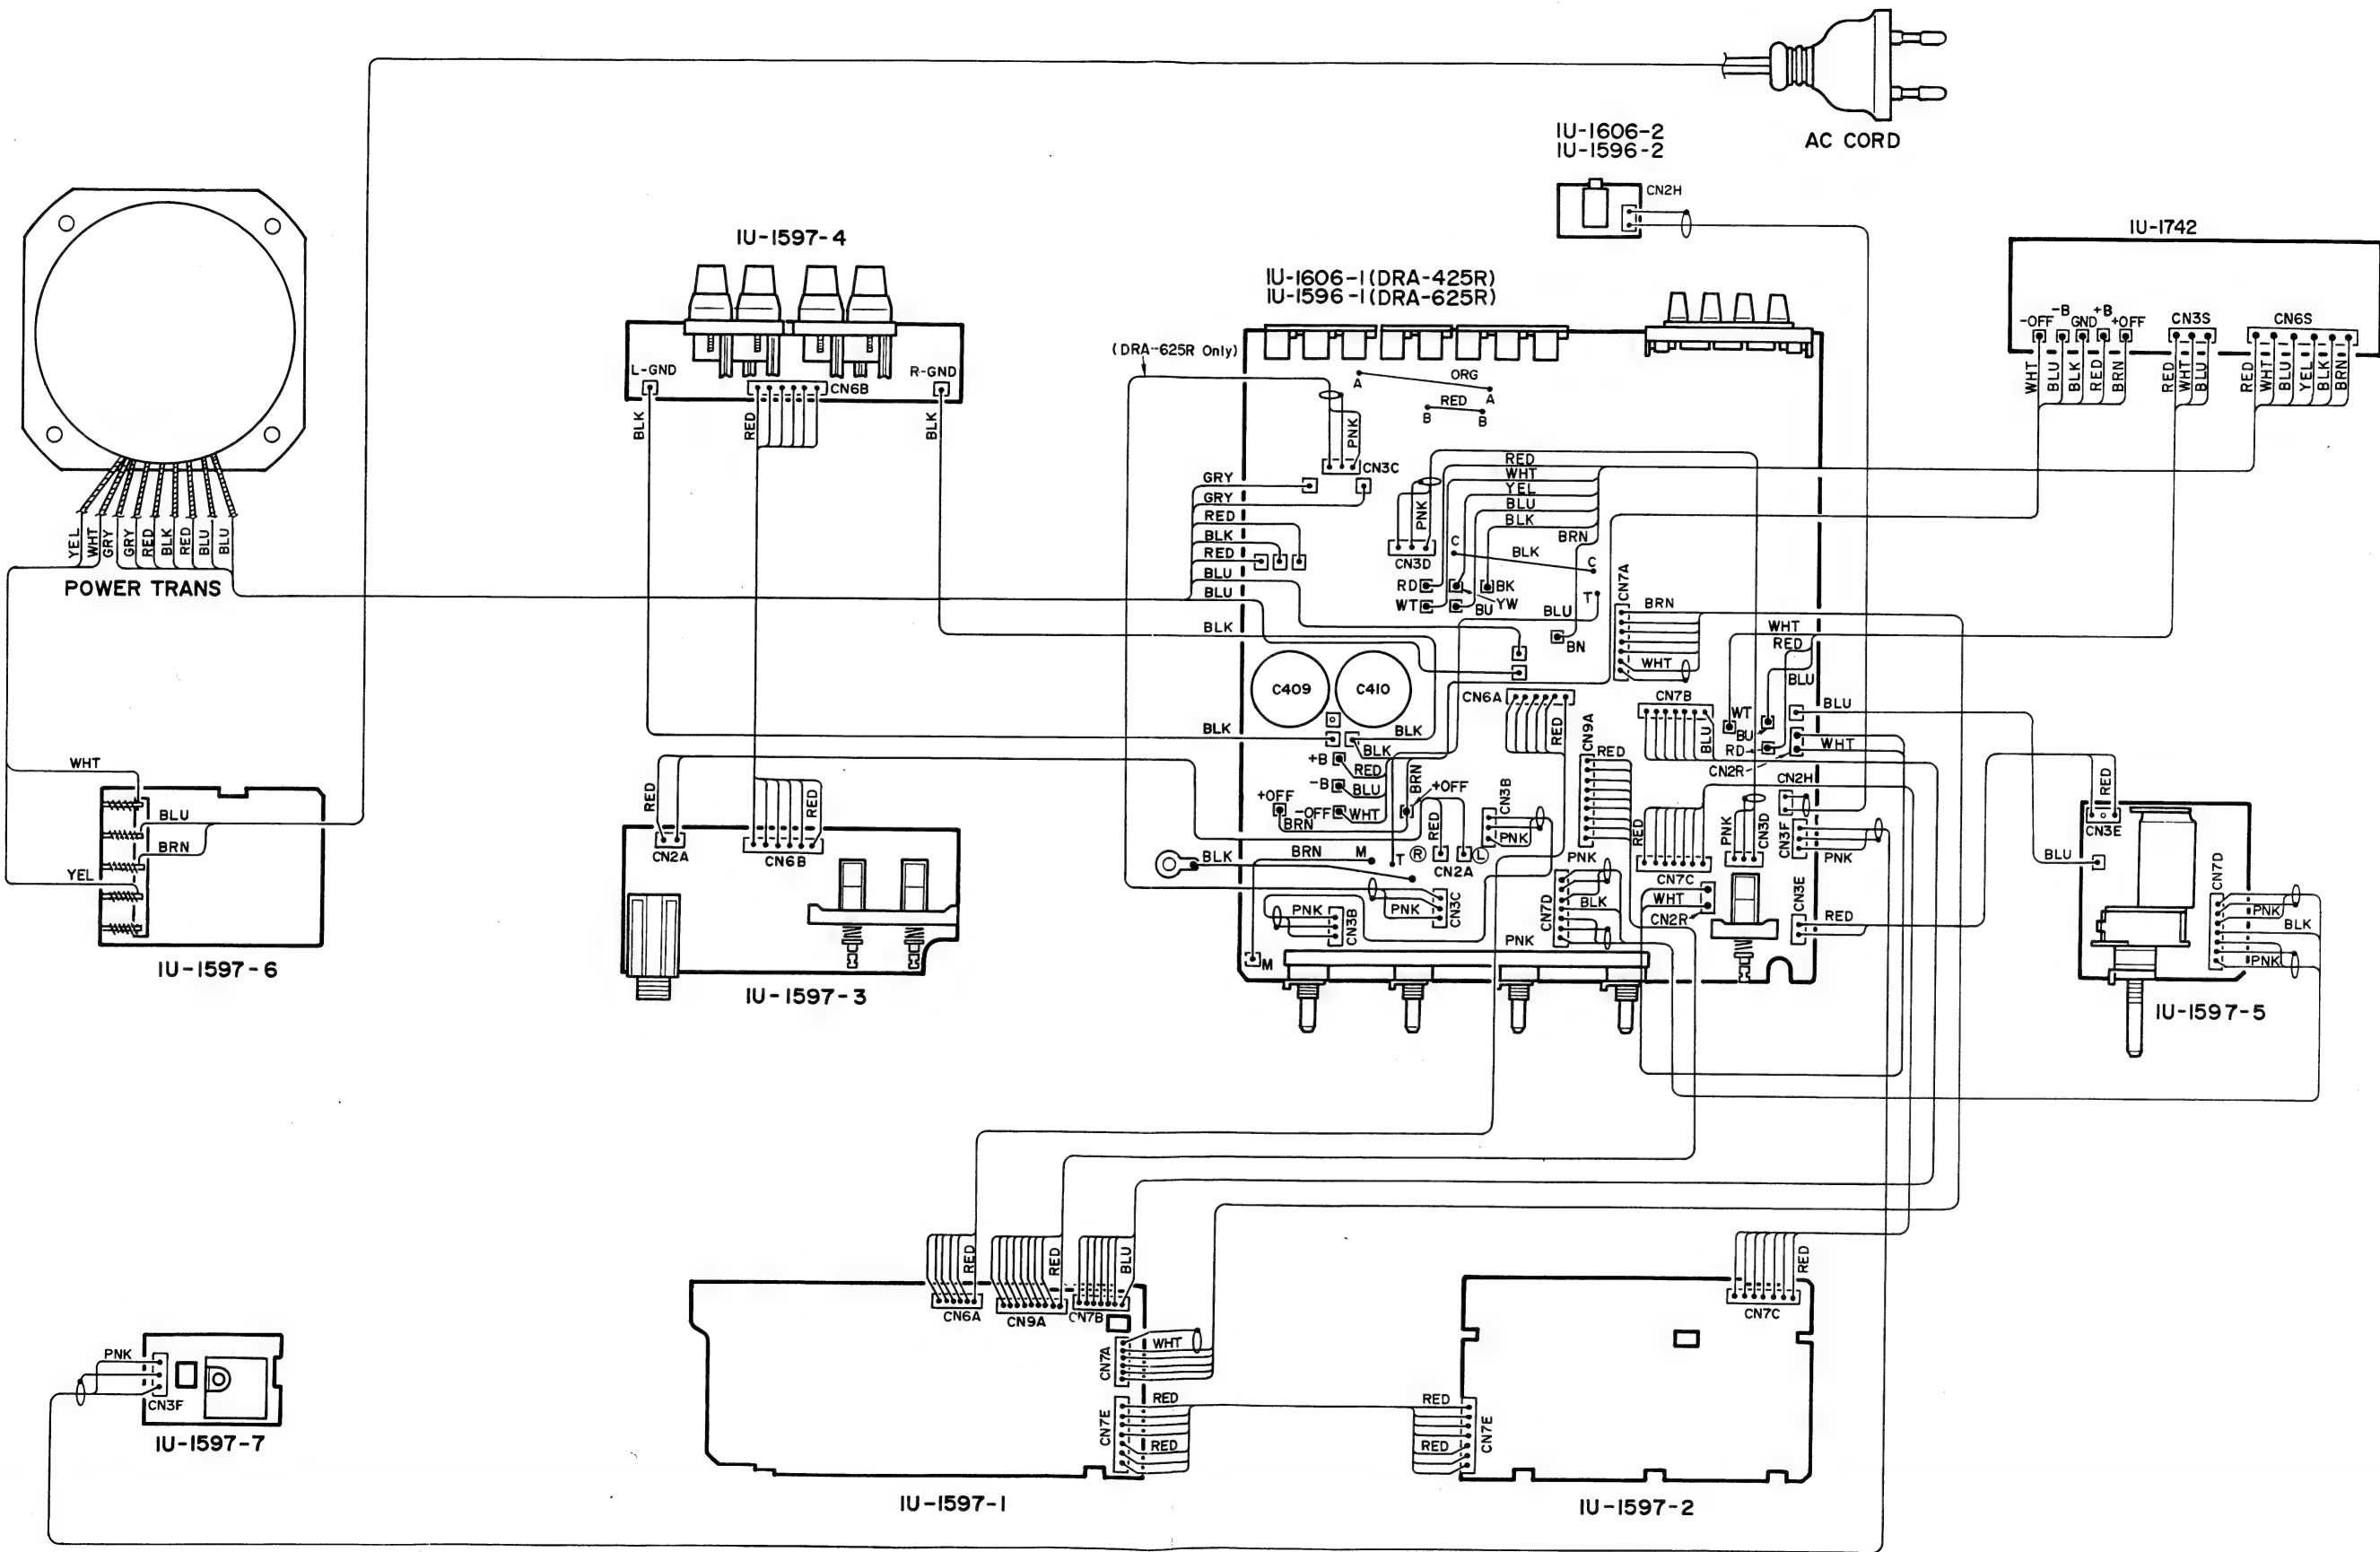

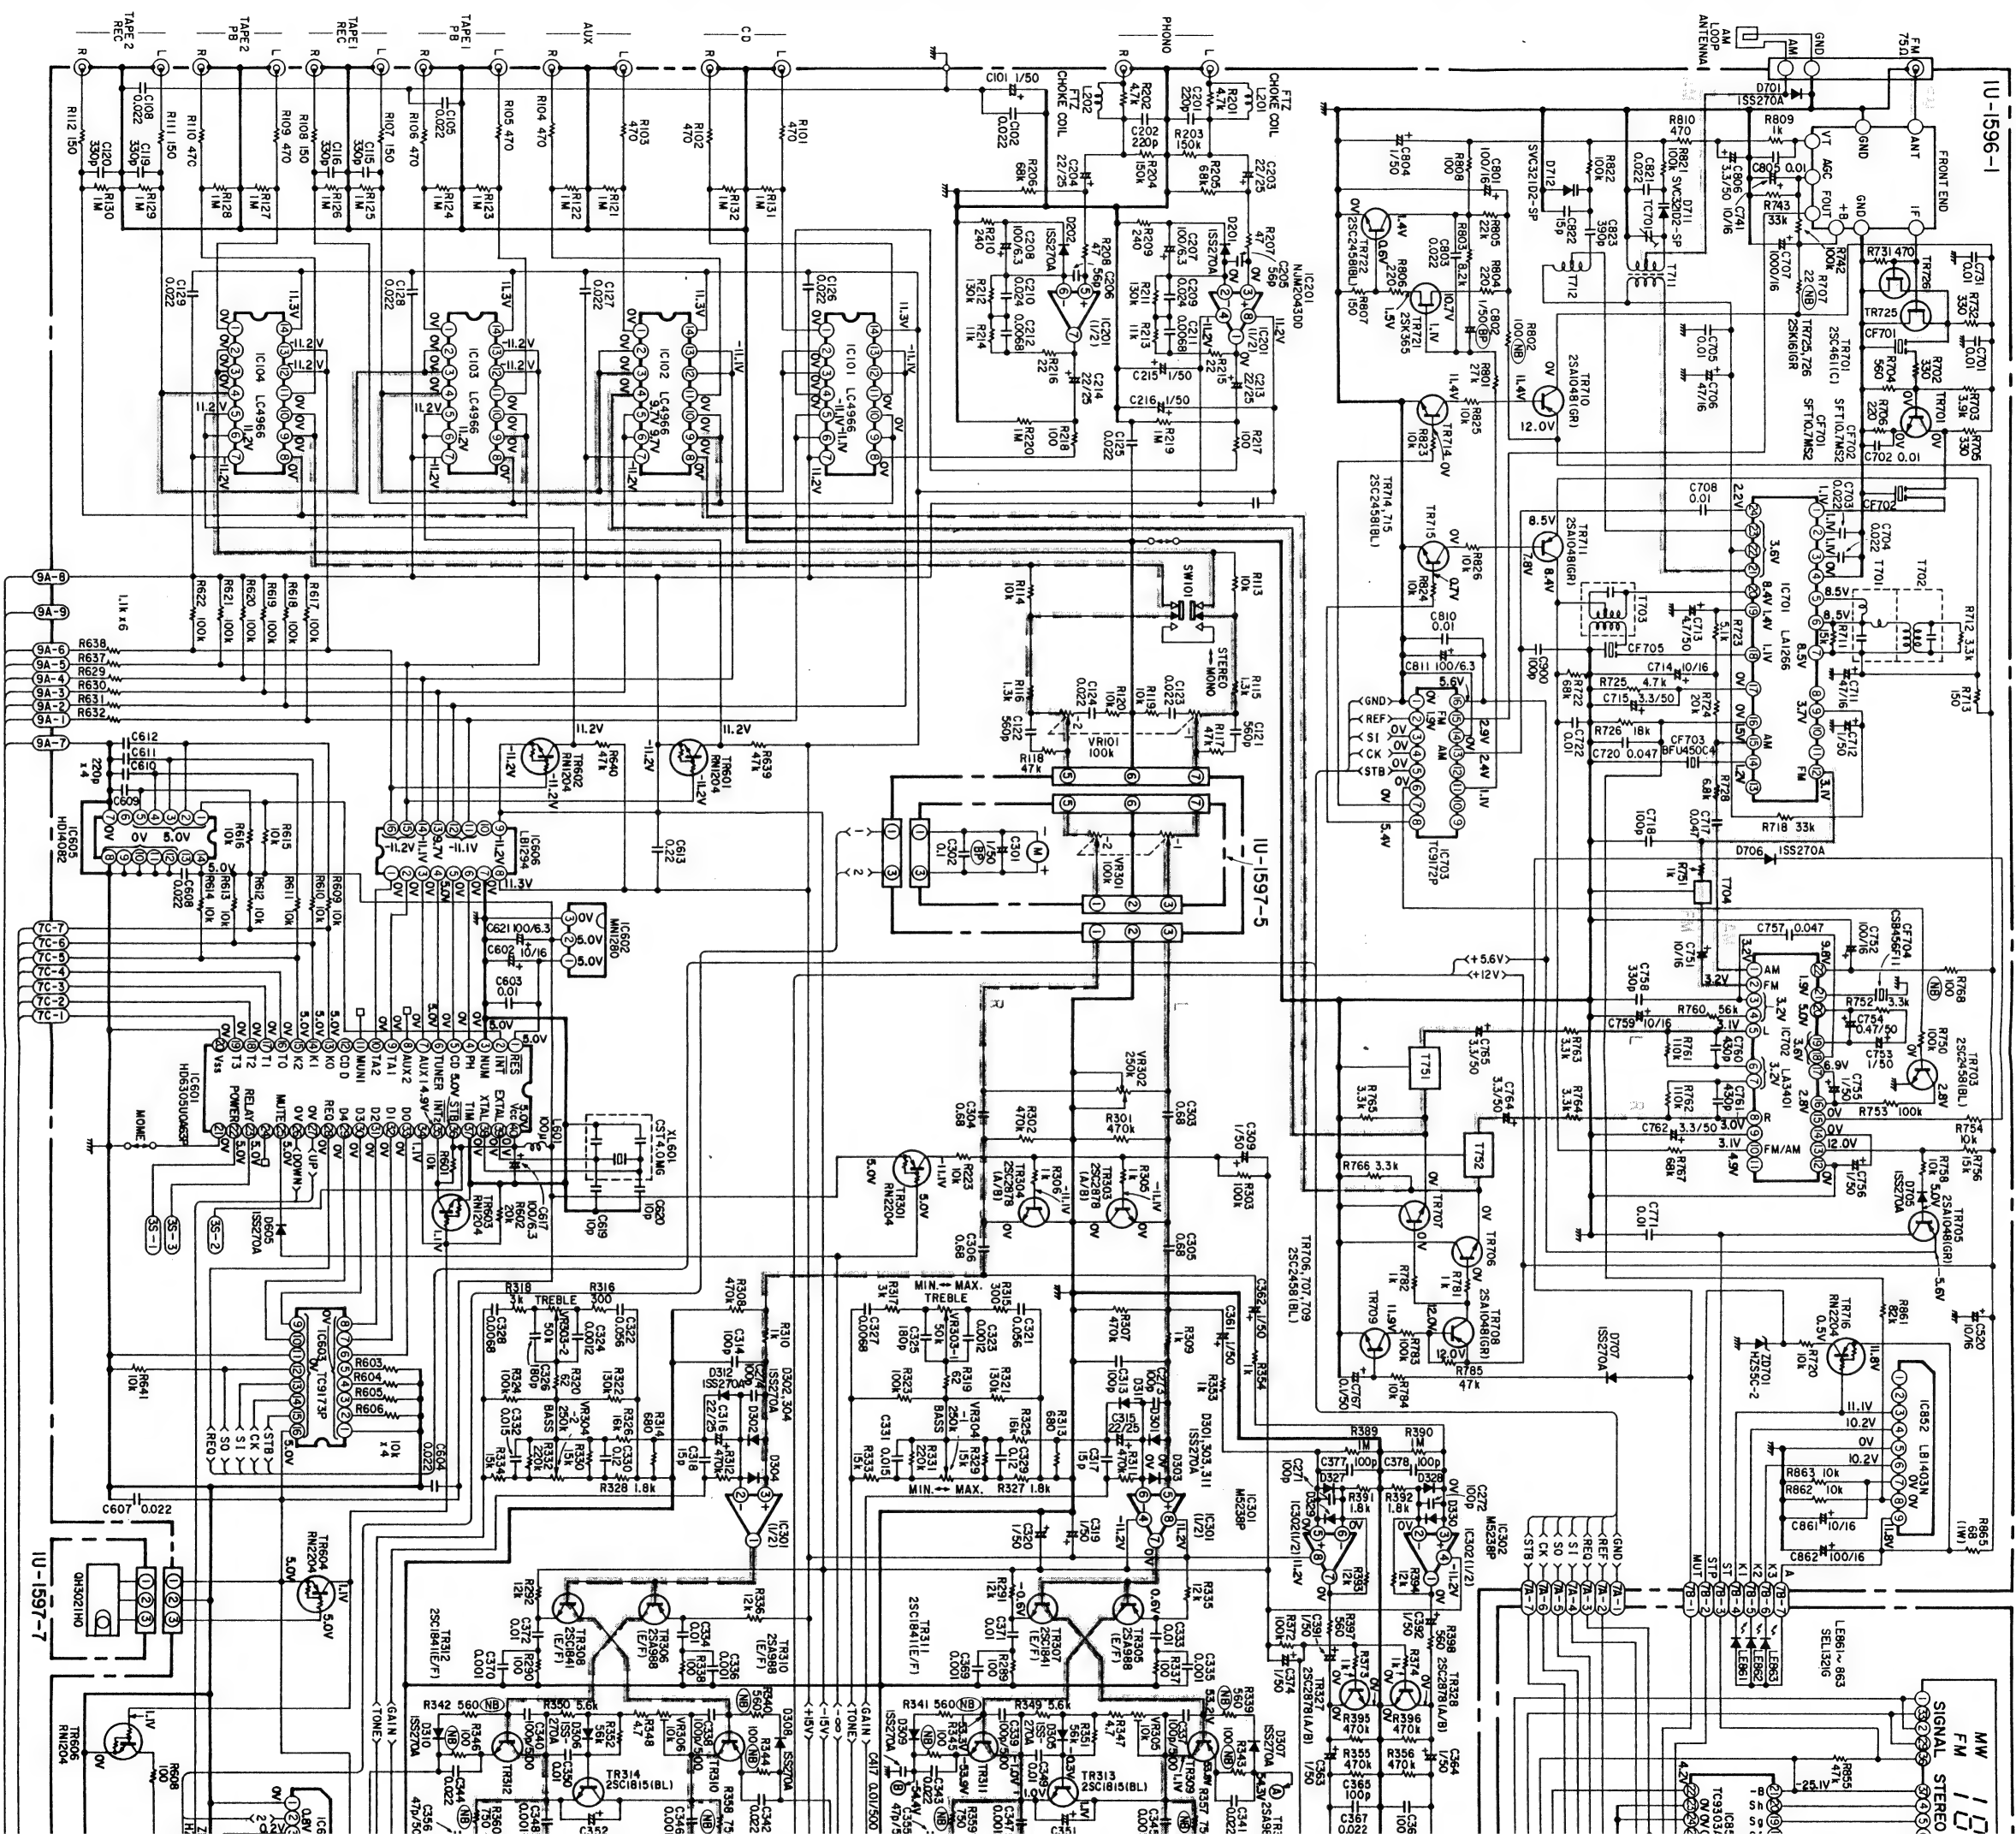

NOTES
ALL RESISTANCE VALUES IN OHM K - 1,000 OHM M -
ALL CAPACITANCE VALUES IN MICRO FARAD P - MICR
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHO

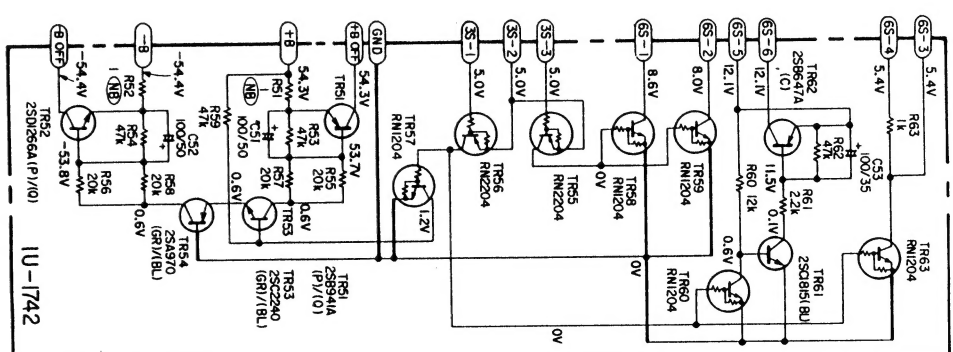


WARNING: Parts marked with this symbol  have critical characteristics. Use **ONLY** replacement parts recommended by the manufacturer.

CAUTION: Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 k ohms, the unit is defective.


WARNING: Do not return the unit to the customer until the problem is located and corrected.

—

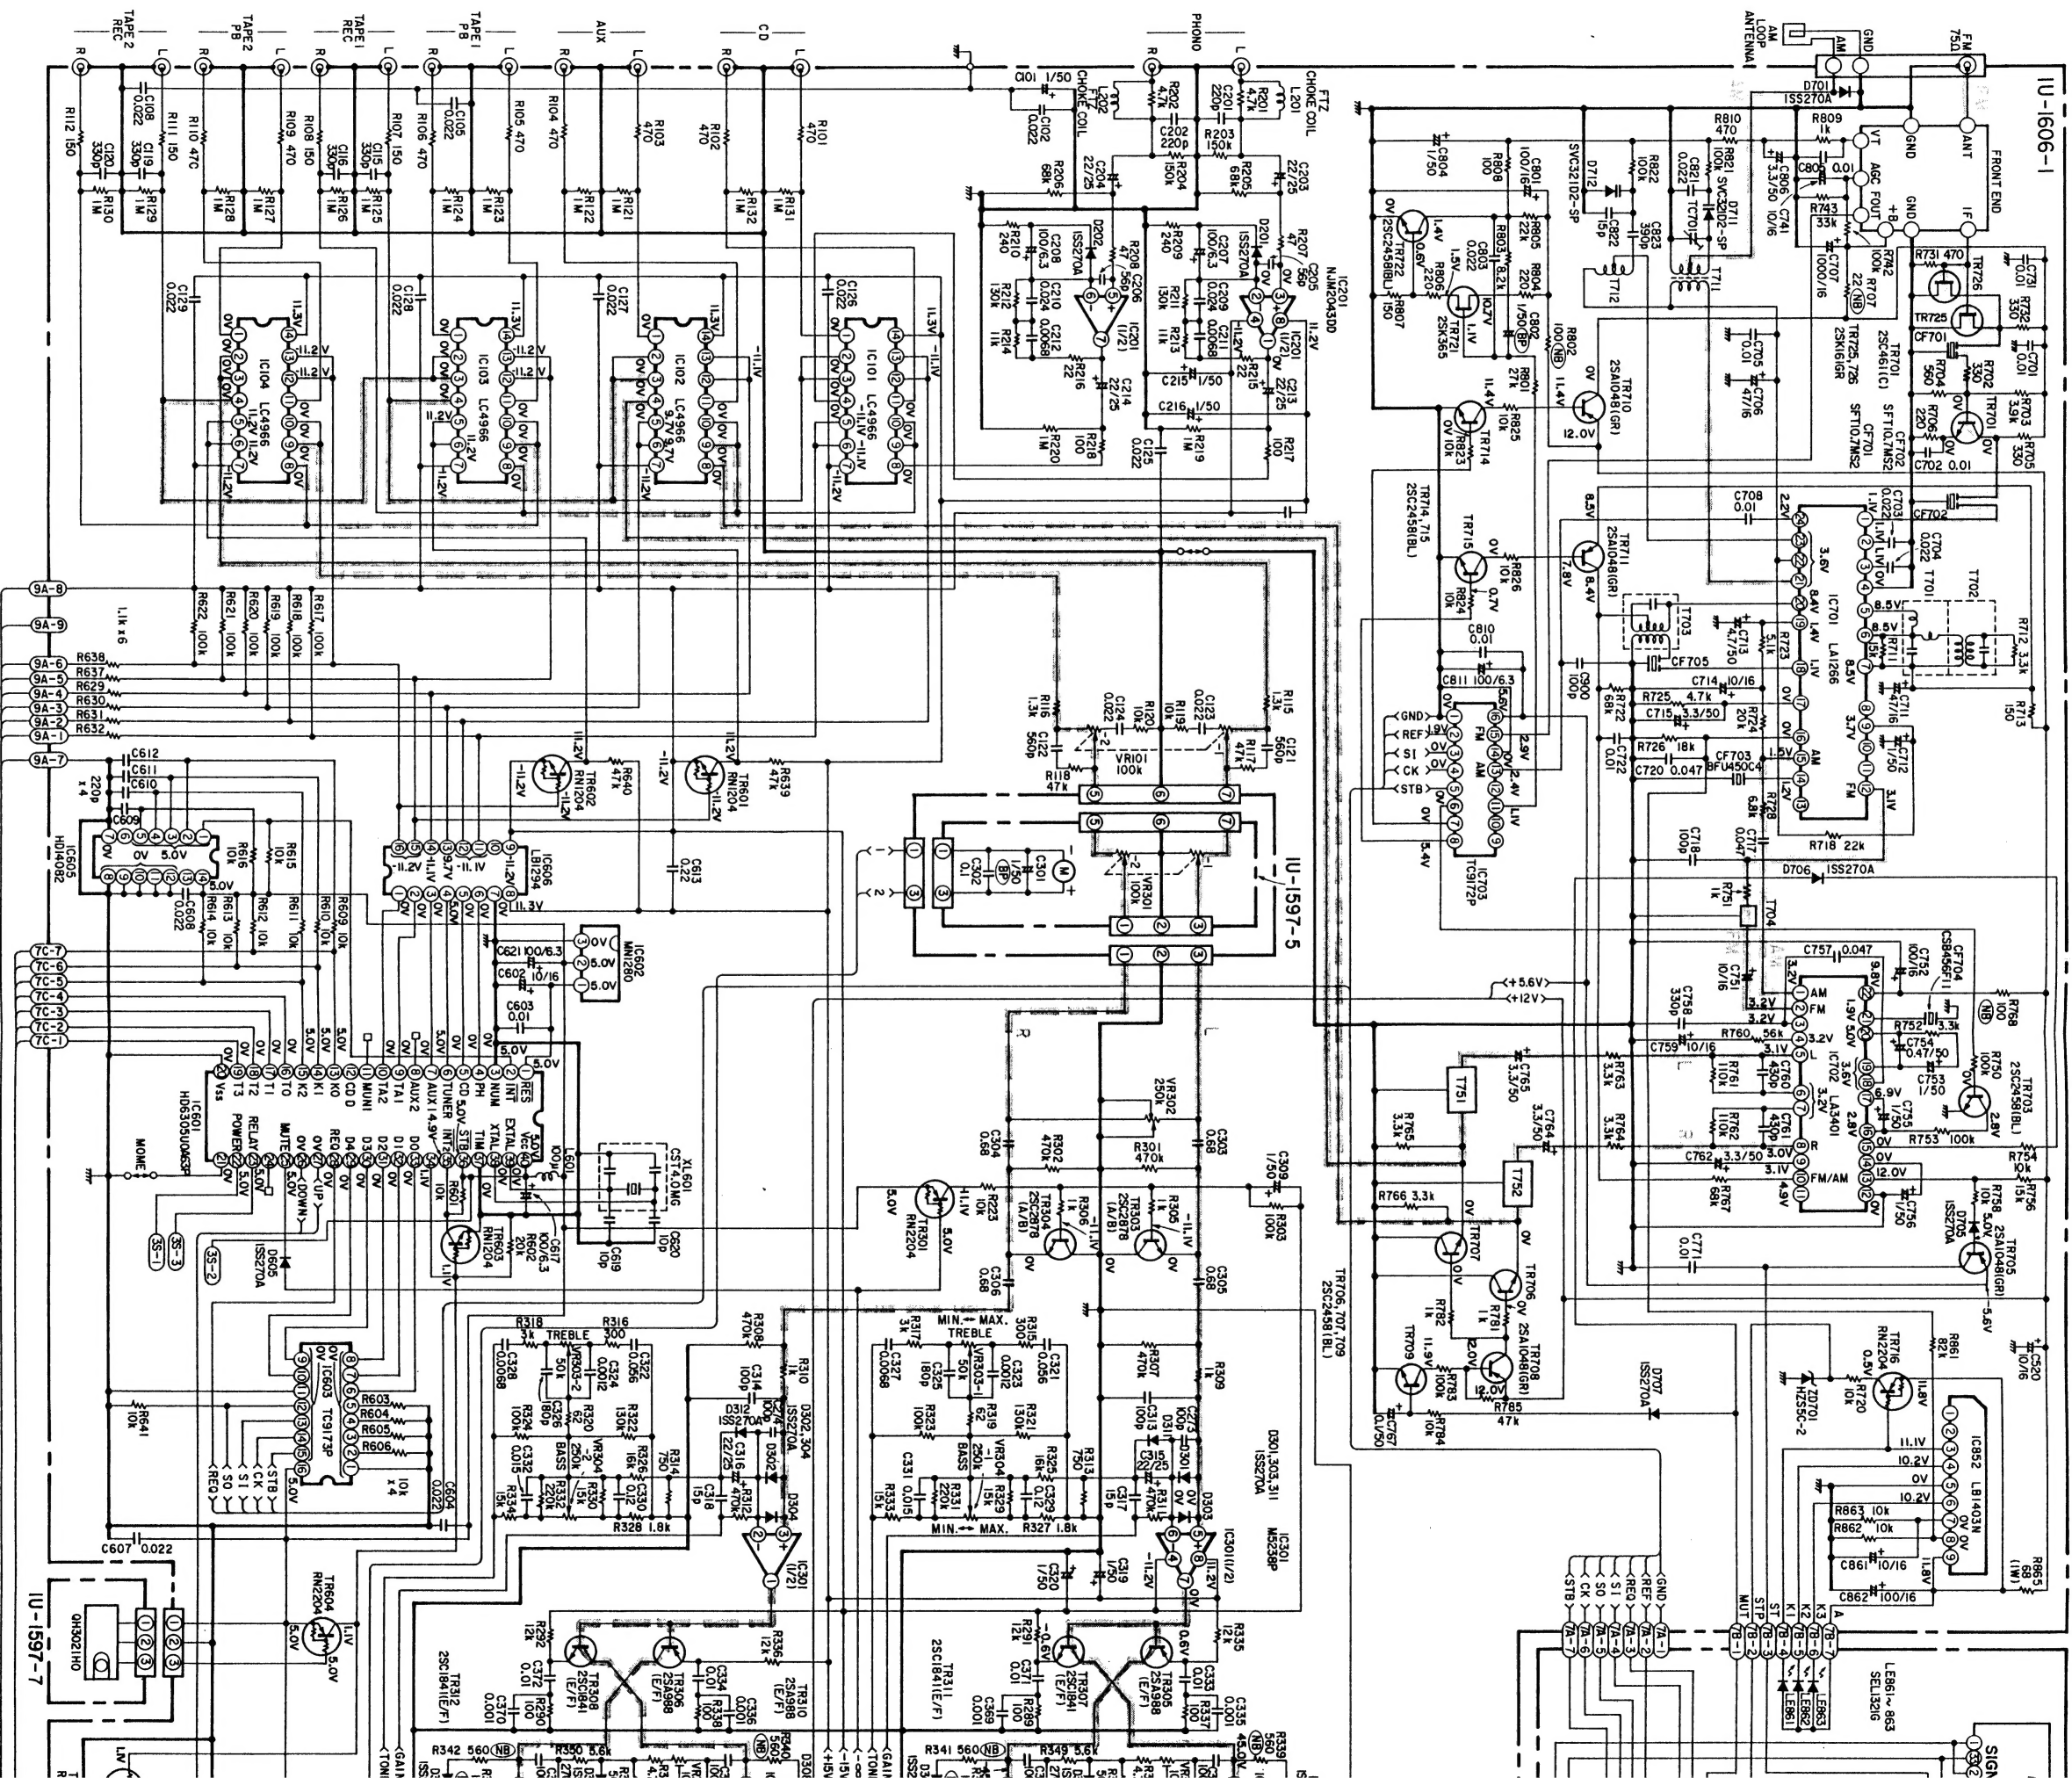




NOTES

ALL RESISTANCE VALUES IN OHM K = 1,000 OHM M = 1,000,000 OHM
ALL CAPACITANCE VALUES IN MICRO FARAD P = MICRO-MICRO FARAD
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

WARNING: Parts marked with this symbol  have critical characteristics. Use **ONLY** replacement parts recommended by the manufacturer.

CAUTION: Before returning the unit to the customer, make sure you make either (1) a leak check, if the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to the unit is defective.


WARNING: **DO NOT** return the unit to the customer until the problem is located and corrected.

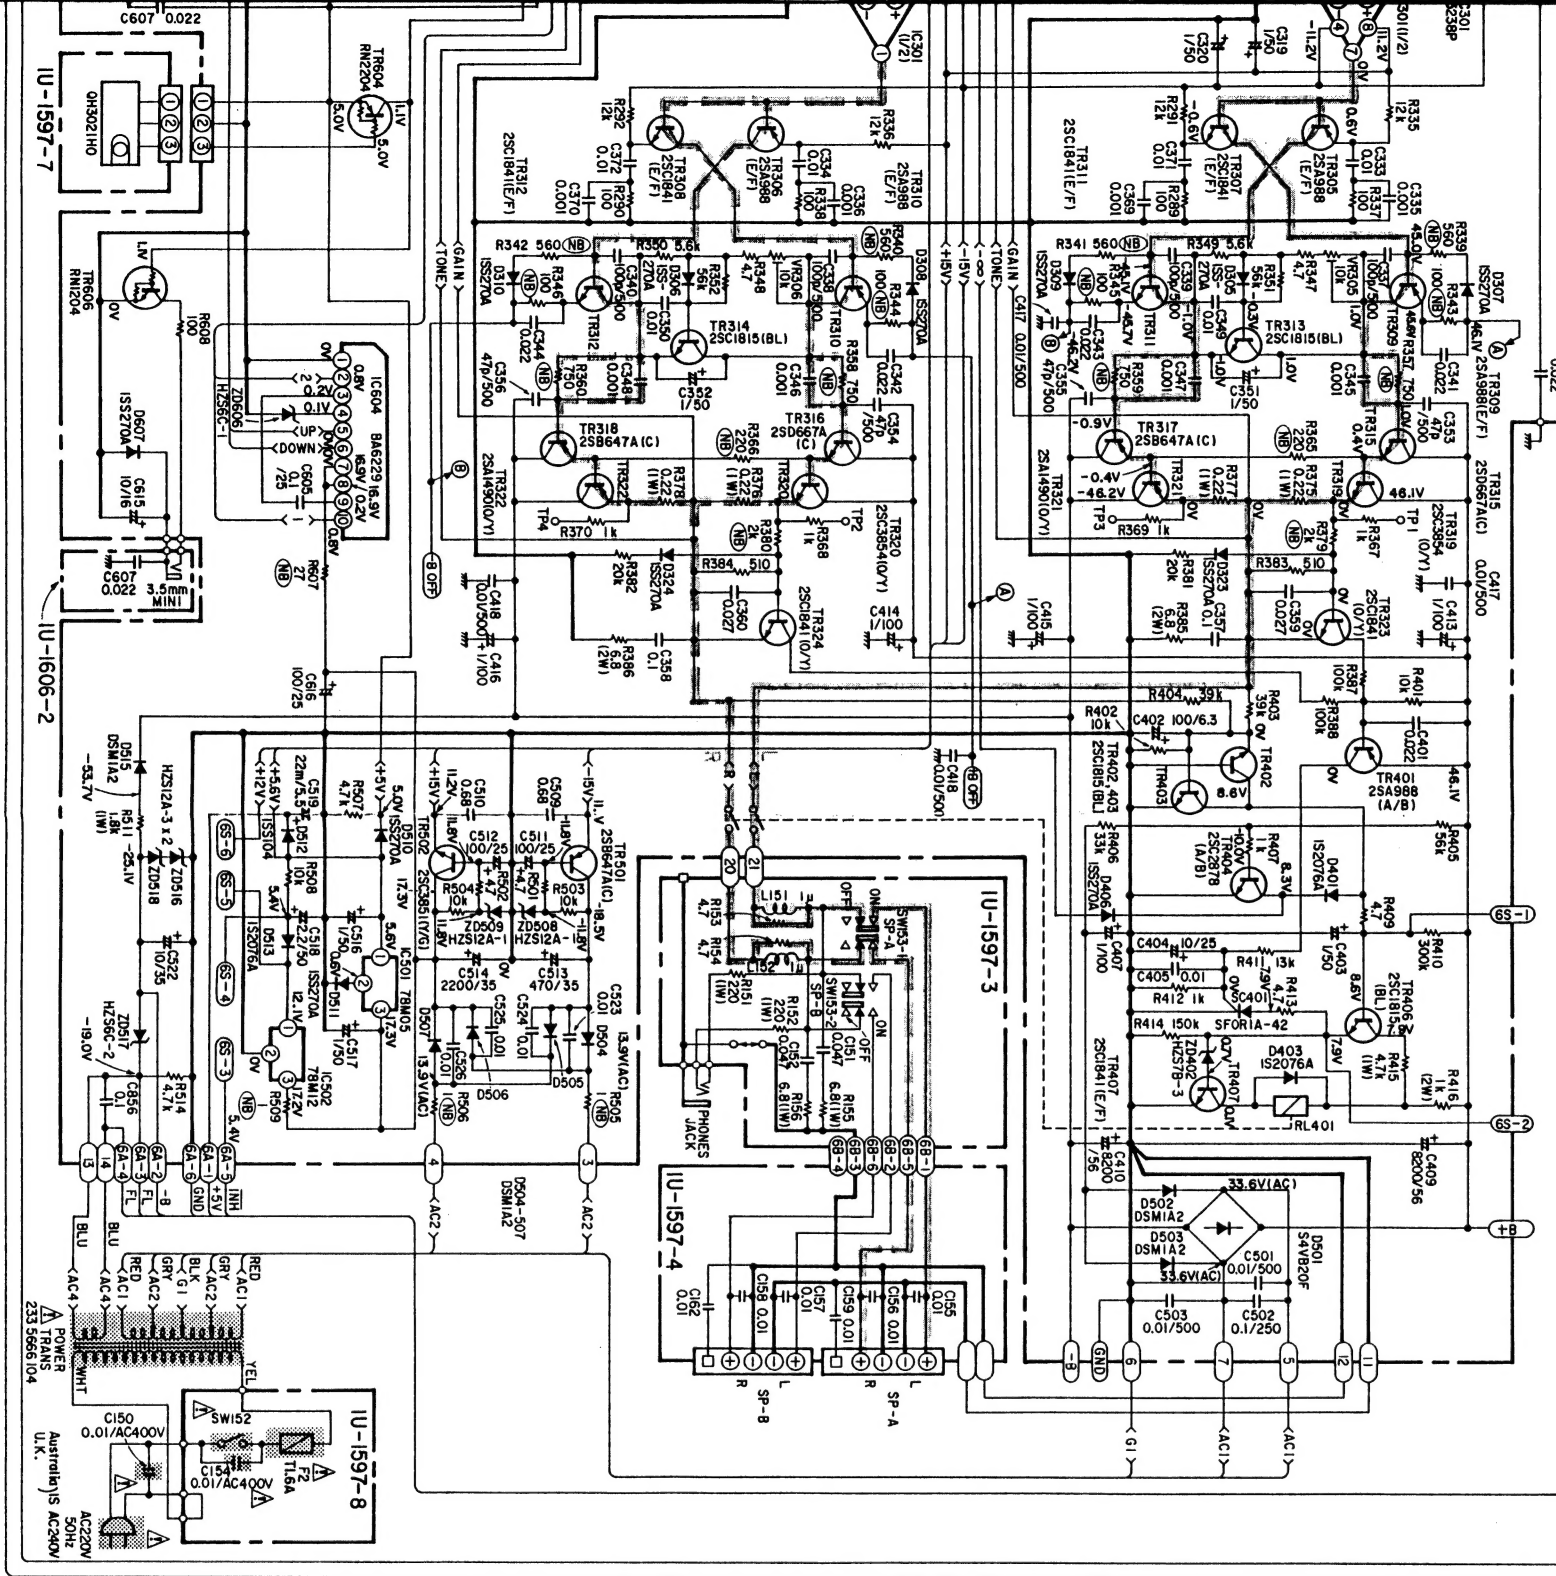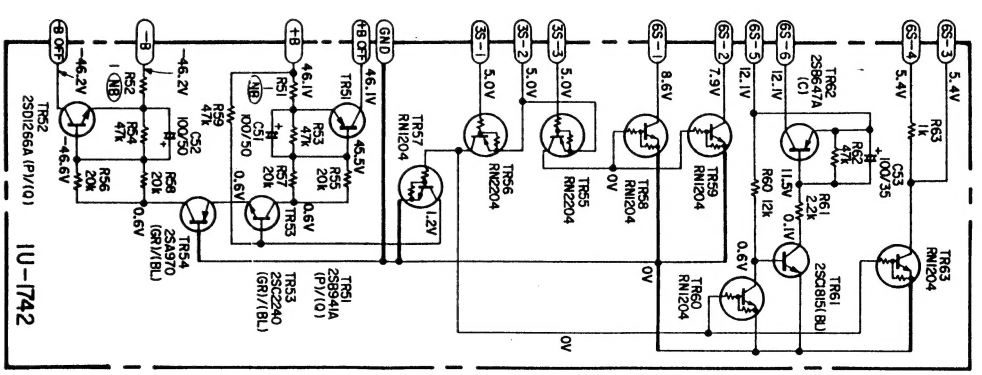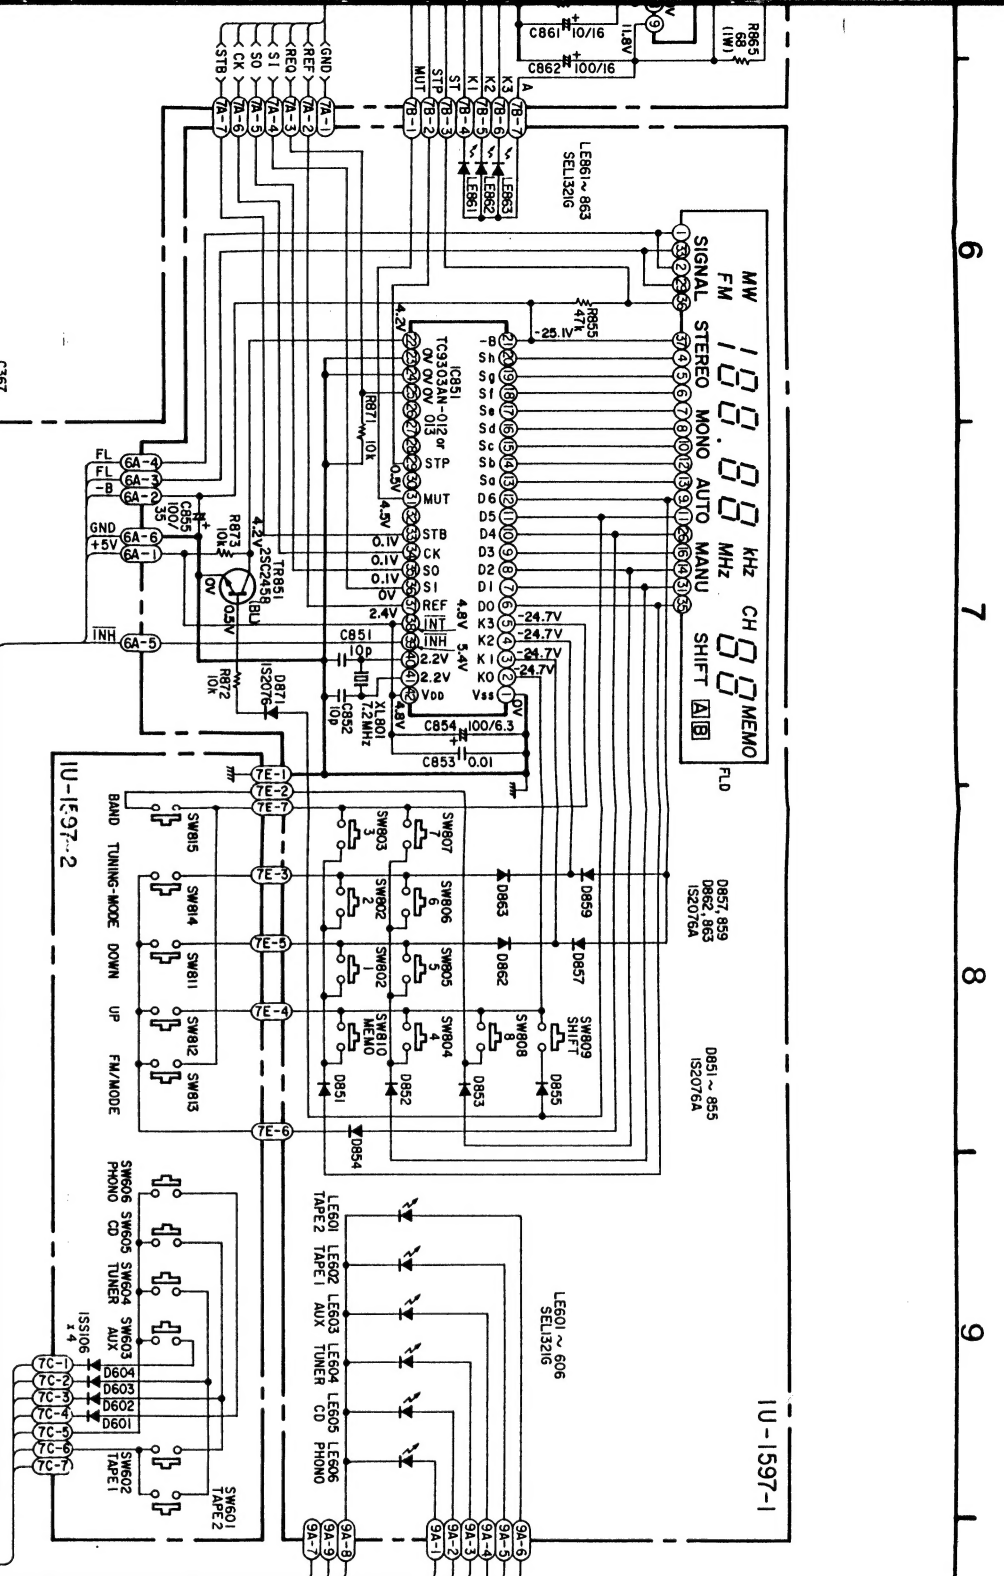

check or (2) a line to chassis resistance side of the power cord is less than 240 k

BLOCK DIAGRAM

DRA-625R

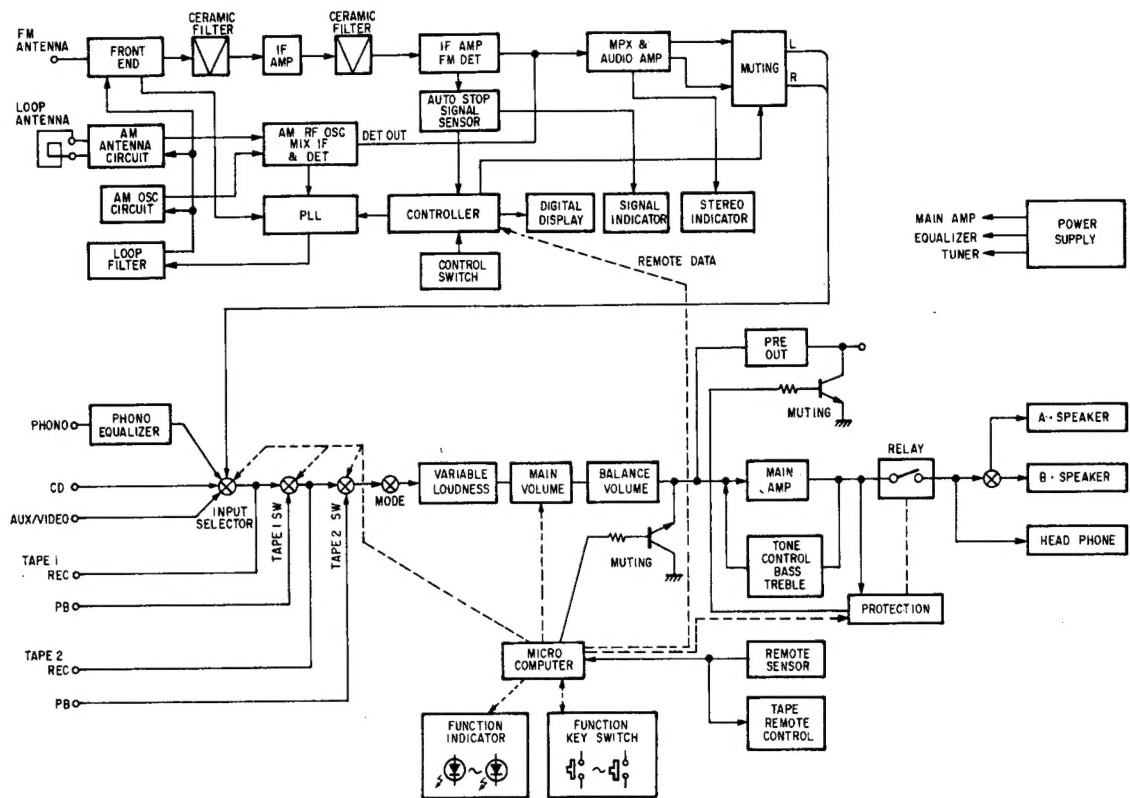

DRA-425R

